



Assembly instructions

ITEM NO.: 1270-1


 




ACCENT CHAIR





Legs are stored under the bottom, please take out for assembly.


Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

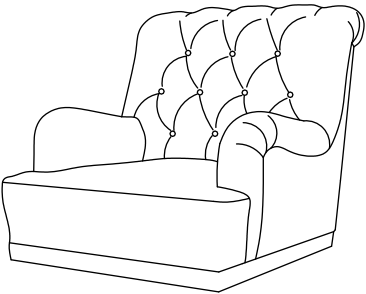Component list

  
No	Drawing	Qty	Description
A		1	SEAT + BACK REST
B		2	FRONT WOODEN LEGS
C		2	REAR WOODEN LEGS
D		4	PLASTIC WASHER (Ø1.89")
E		2	Felt pad (Ø 25mm)
F		2	Felt pad (35x35mm)

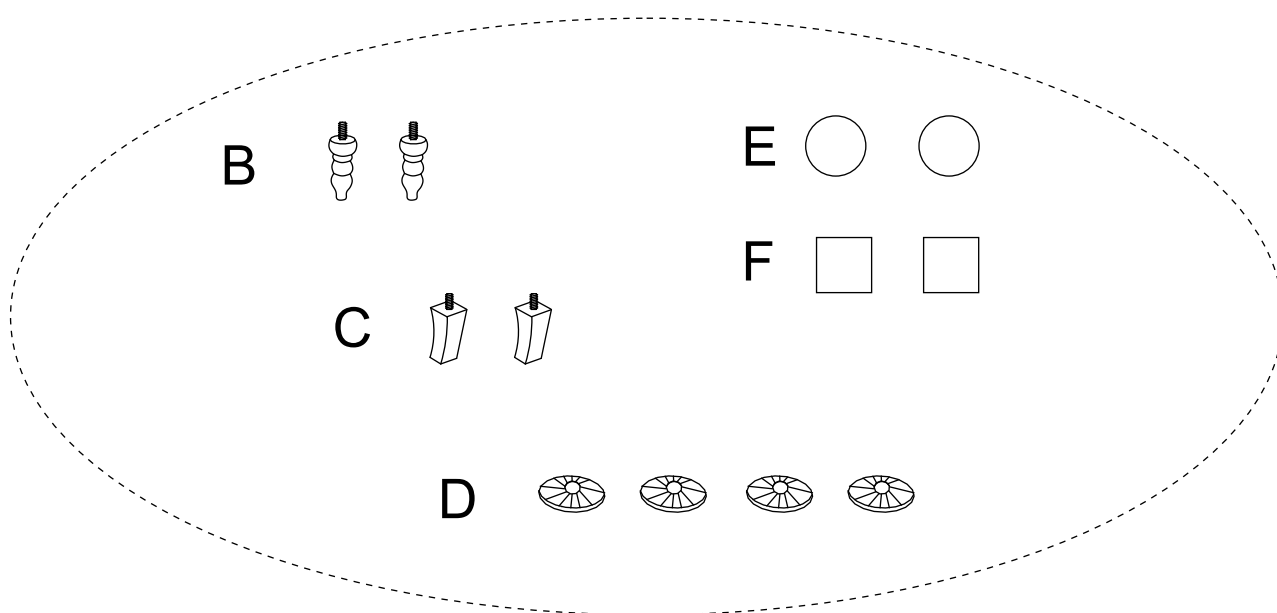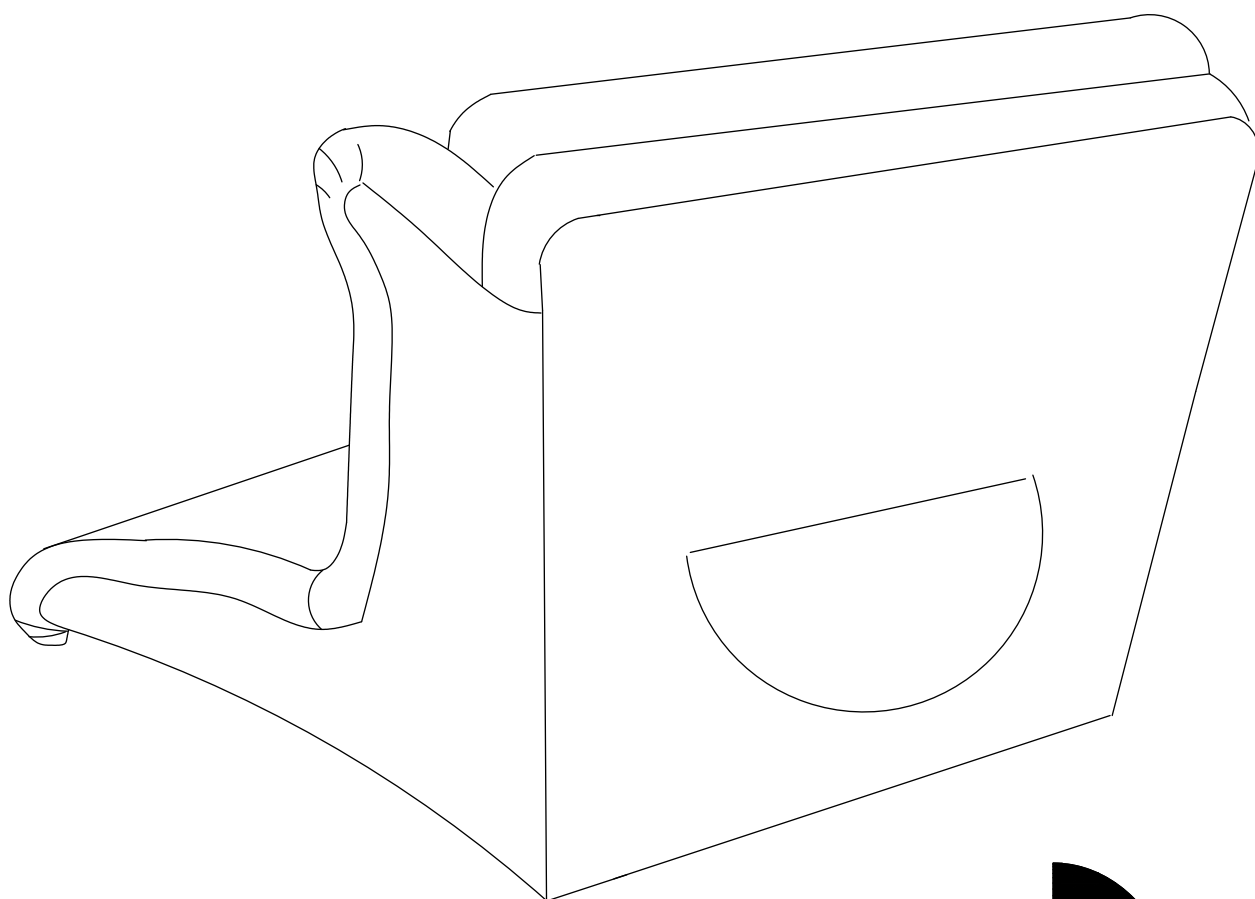


Step1:

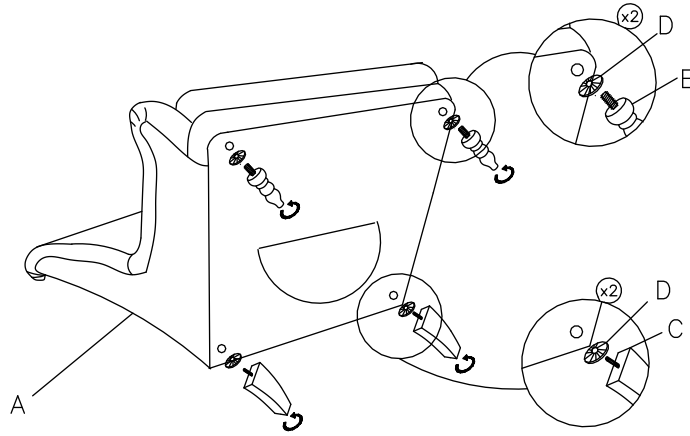

Step2:

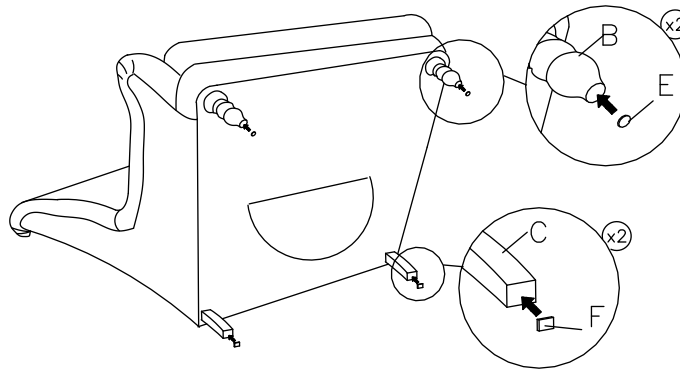

Step3:

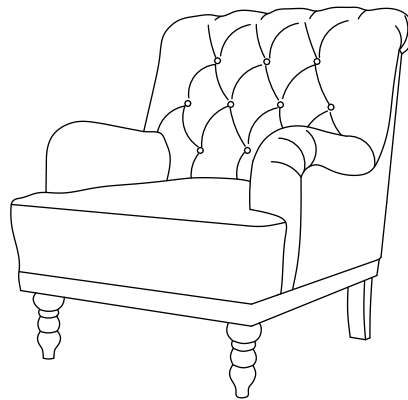

Care Instruction for Texture fabric & Polished Mircofibe Furniture:

In order to maintain the original appearance of your Texture fabric & Polished Mircofibe Furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage Texture fabric & Polished Mircofibe.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.