

 
 
ASSEMBLY INSTRUCTIONS




ITEM NO: 8340GRY-1PWHB
POWER RECLINING CHAIR




NOTE: Do not use power tools for assembly. Power tools increase the risk of over-tightening which leads to splitting or cracking the wood.

NO.	DRAWING	DESCRIPTION	QTY
A		Seat	1 PC
B		Backrest	1 PC
C		Speaker Adaptor	1 PC
D		Chair Adaptor	1 PC


STEP 1:

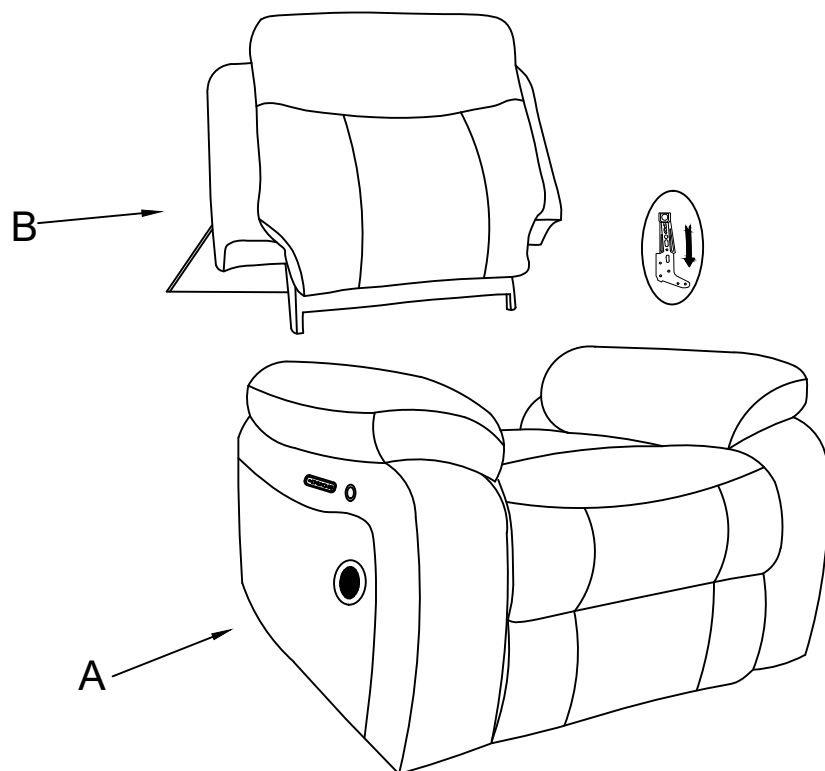


STEP 2:

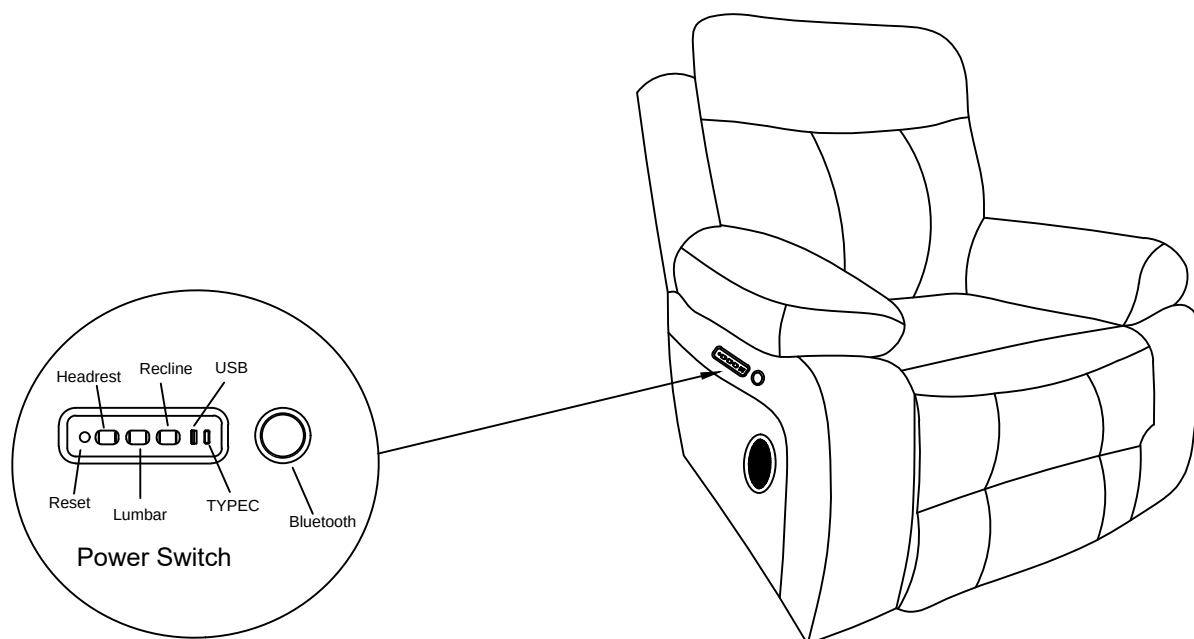


STEP 3:

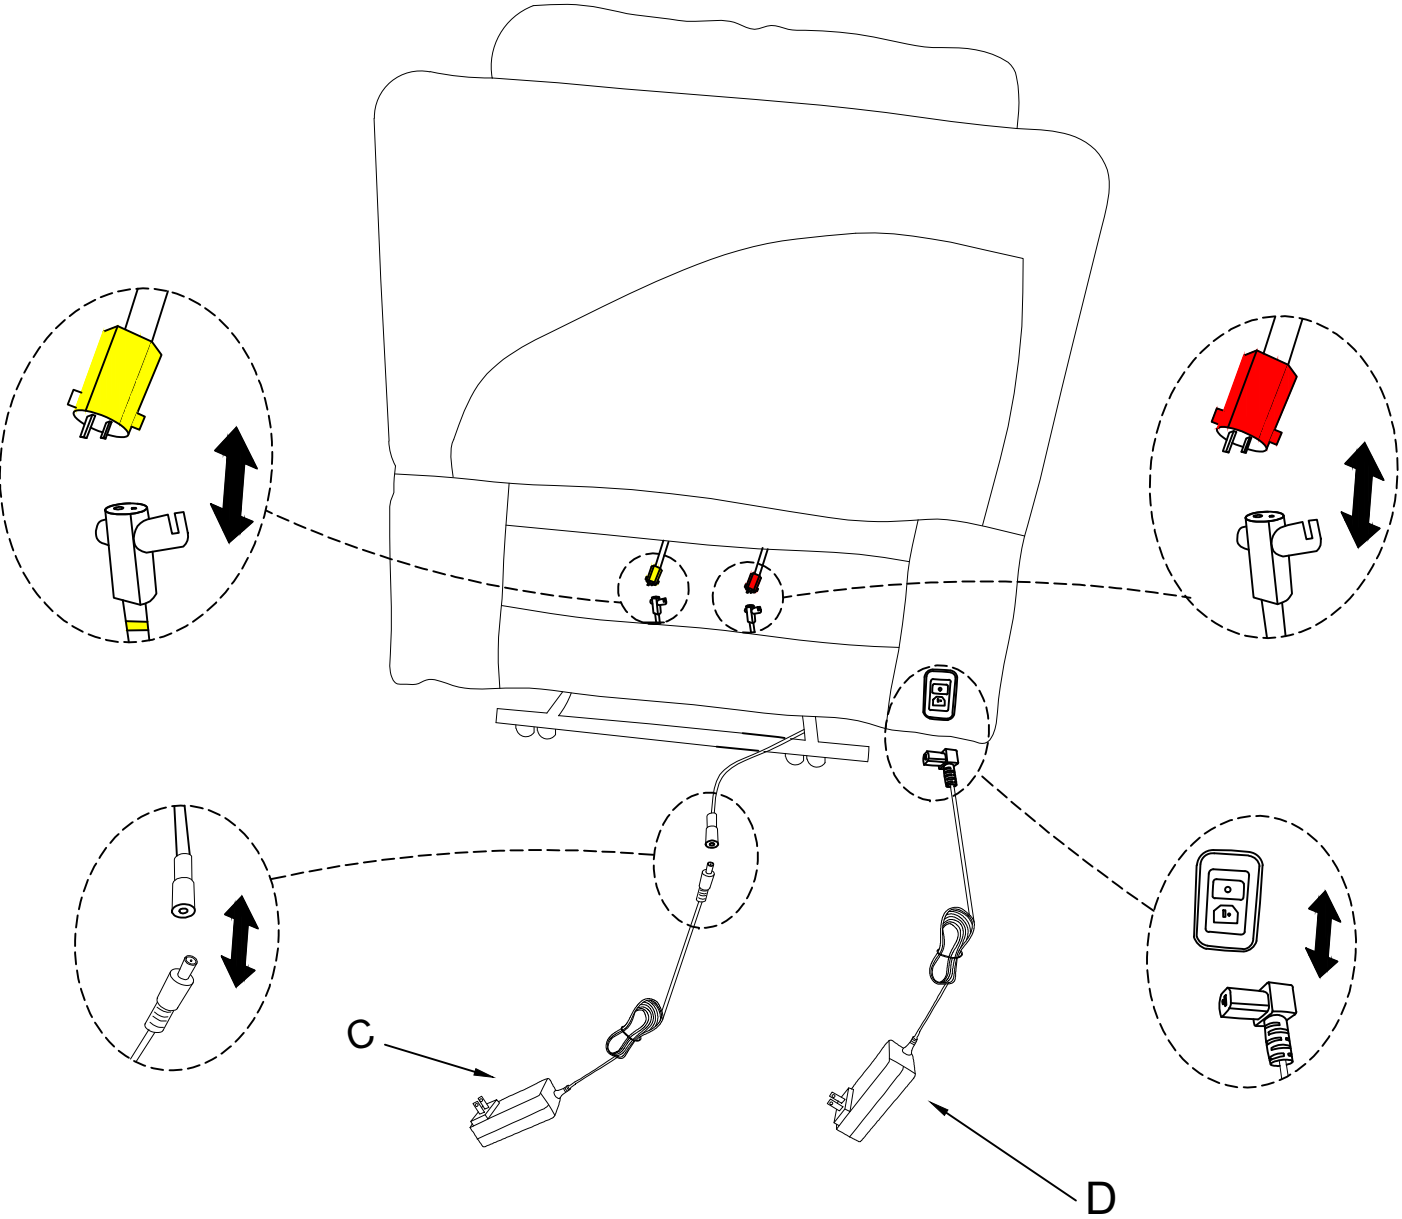


STEP 4:

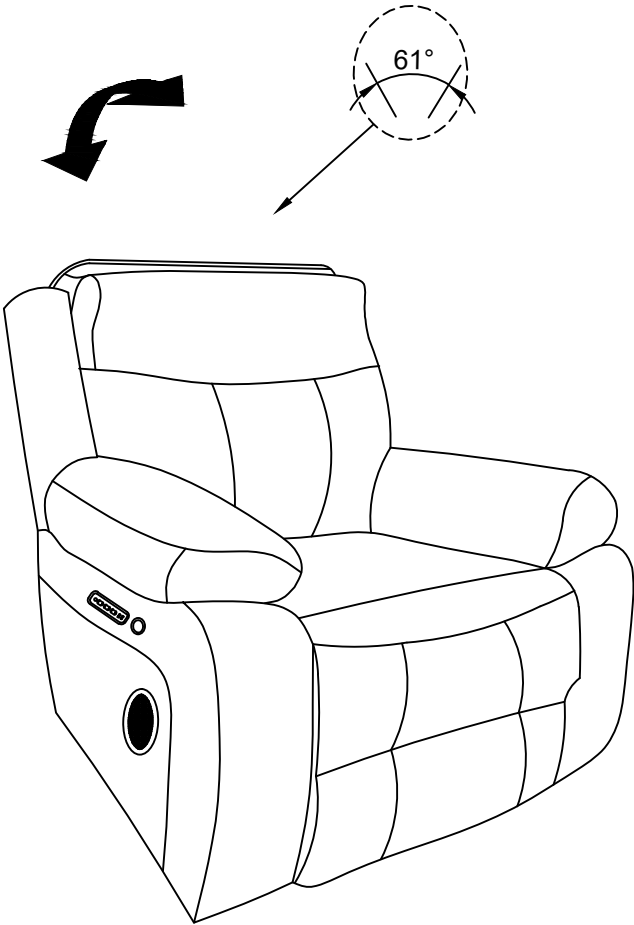

STEP 5:

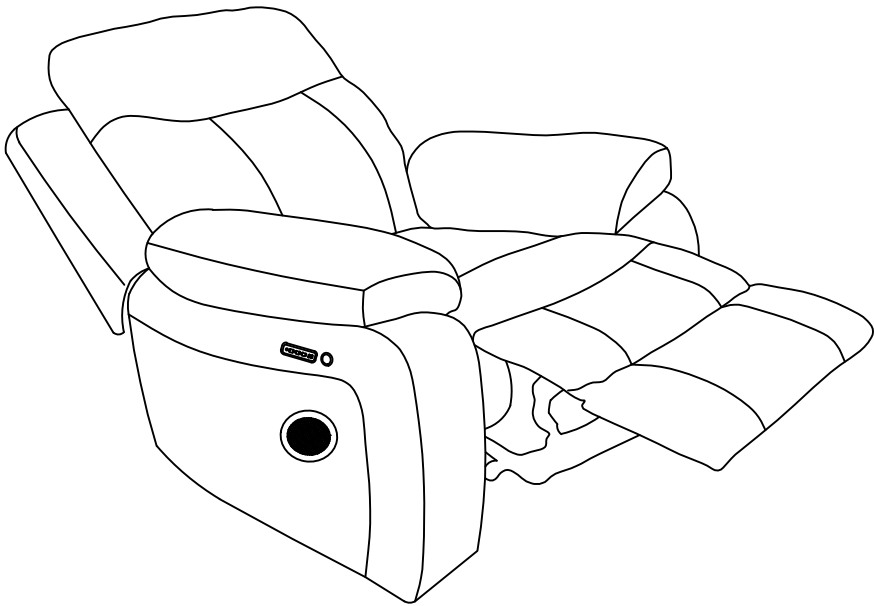

STEP 6:

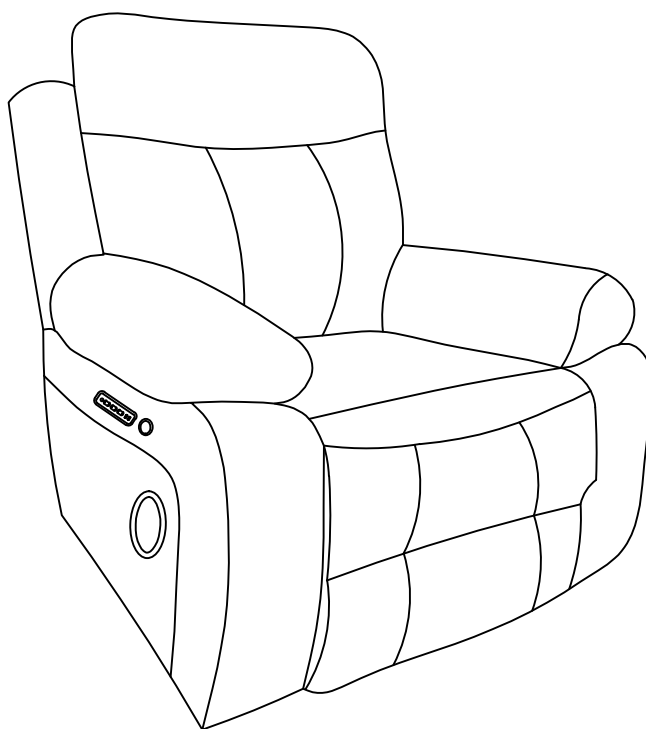

Care Instructions for Textured Microfiber Furniture:

In order to maintain the original appearance of your textured microfiber furniture, please follow the simple care procedures below:

- **Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and/or exposure to heating and air conditioning outlets will fade/damage textured Microfiber.**
- **Vacuum or wipe with a soft cloth to remove dust.**
- **Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.**



For items used on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to prevent damages, scratches and discoloration.

Warning

Do not allow electrical cord to be pinched between moving parts or between the frame and the floor. Do not place cord under carpet or in location where it could become worn.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



WARNING: To avoid serious injury:

- Carefully and strictly follow assembly instructions.
Improper assembly of furniture can result in structural failure, instability of the product or tip-over.
 - Monitor and carefully control the assembly components.
These include small parts and hardware that may present a choking hazard to small children.
 - Where provided, wall mounting hardware should always be used.
As prescribed in these instructions to anchor furniture to walls. Proper use of the wall mounting can significantly reduce the potential for furniture tip-over and crush injuries.
- Technique Parameter

Input: 29V DC

USB Output (TOTAL): 10W (12W Max)

Single TYPE – A: 5V2A (2.4A Max)

Single TYPE – C: 5V2A (2.4A Max)

FCC Responsible Party:

SHANGHAI STERLING MOTION TECHNOLOGY CO., LTD

Address: 5825 Lincoln Ave, #346 Buena Park, CA 90620, USA

Tel: 714-746-8307

Email: gc@sterlingmotion.com