



Assembly Instruction






ITEM NO.: 8344BLK/BRW/BUE/GRY-2PWHM

Power Double Reclining Love Seat with Center Console,
Power Headrests, Storage Arms ,Cup Holders, Wireless
speakers with Sub-Woofer, Air Massage, Heat, LED
Lighting and Charging Ports




Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.


COMPONENT LIST

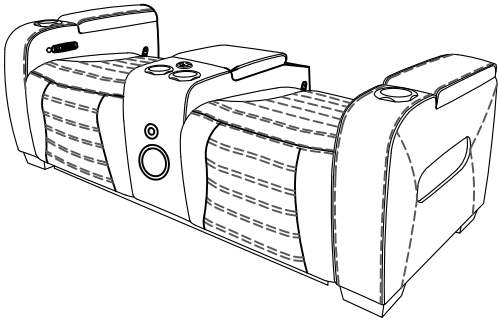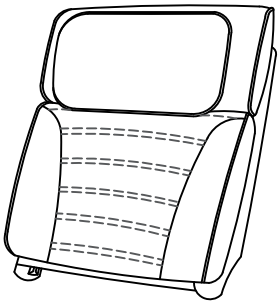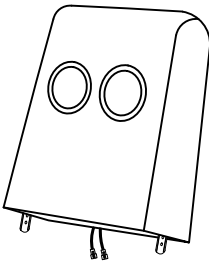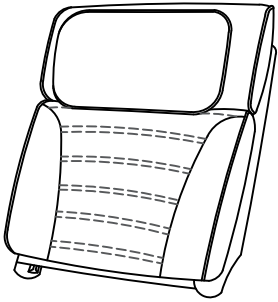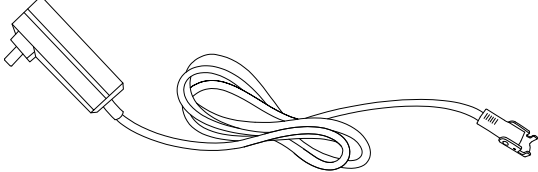No	Drawing	Description	Qty
A		SEAT	1 PC
B		LSF BACK REST	1 PC
C		CONSOLE BACK REST	1 PC
D		RSF BACK REST	1 PC
E		ADAPTOR	2 PCS
F		CONSOLE ADAPTOR	1 PC


Step #1

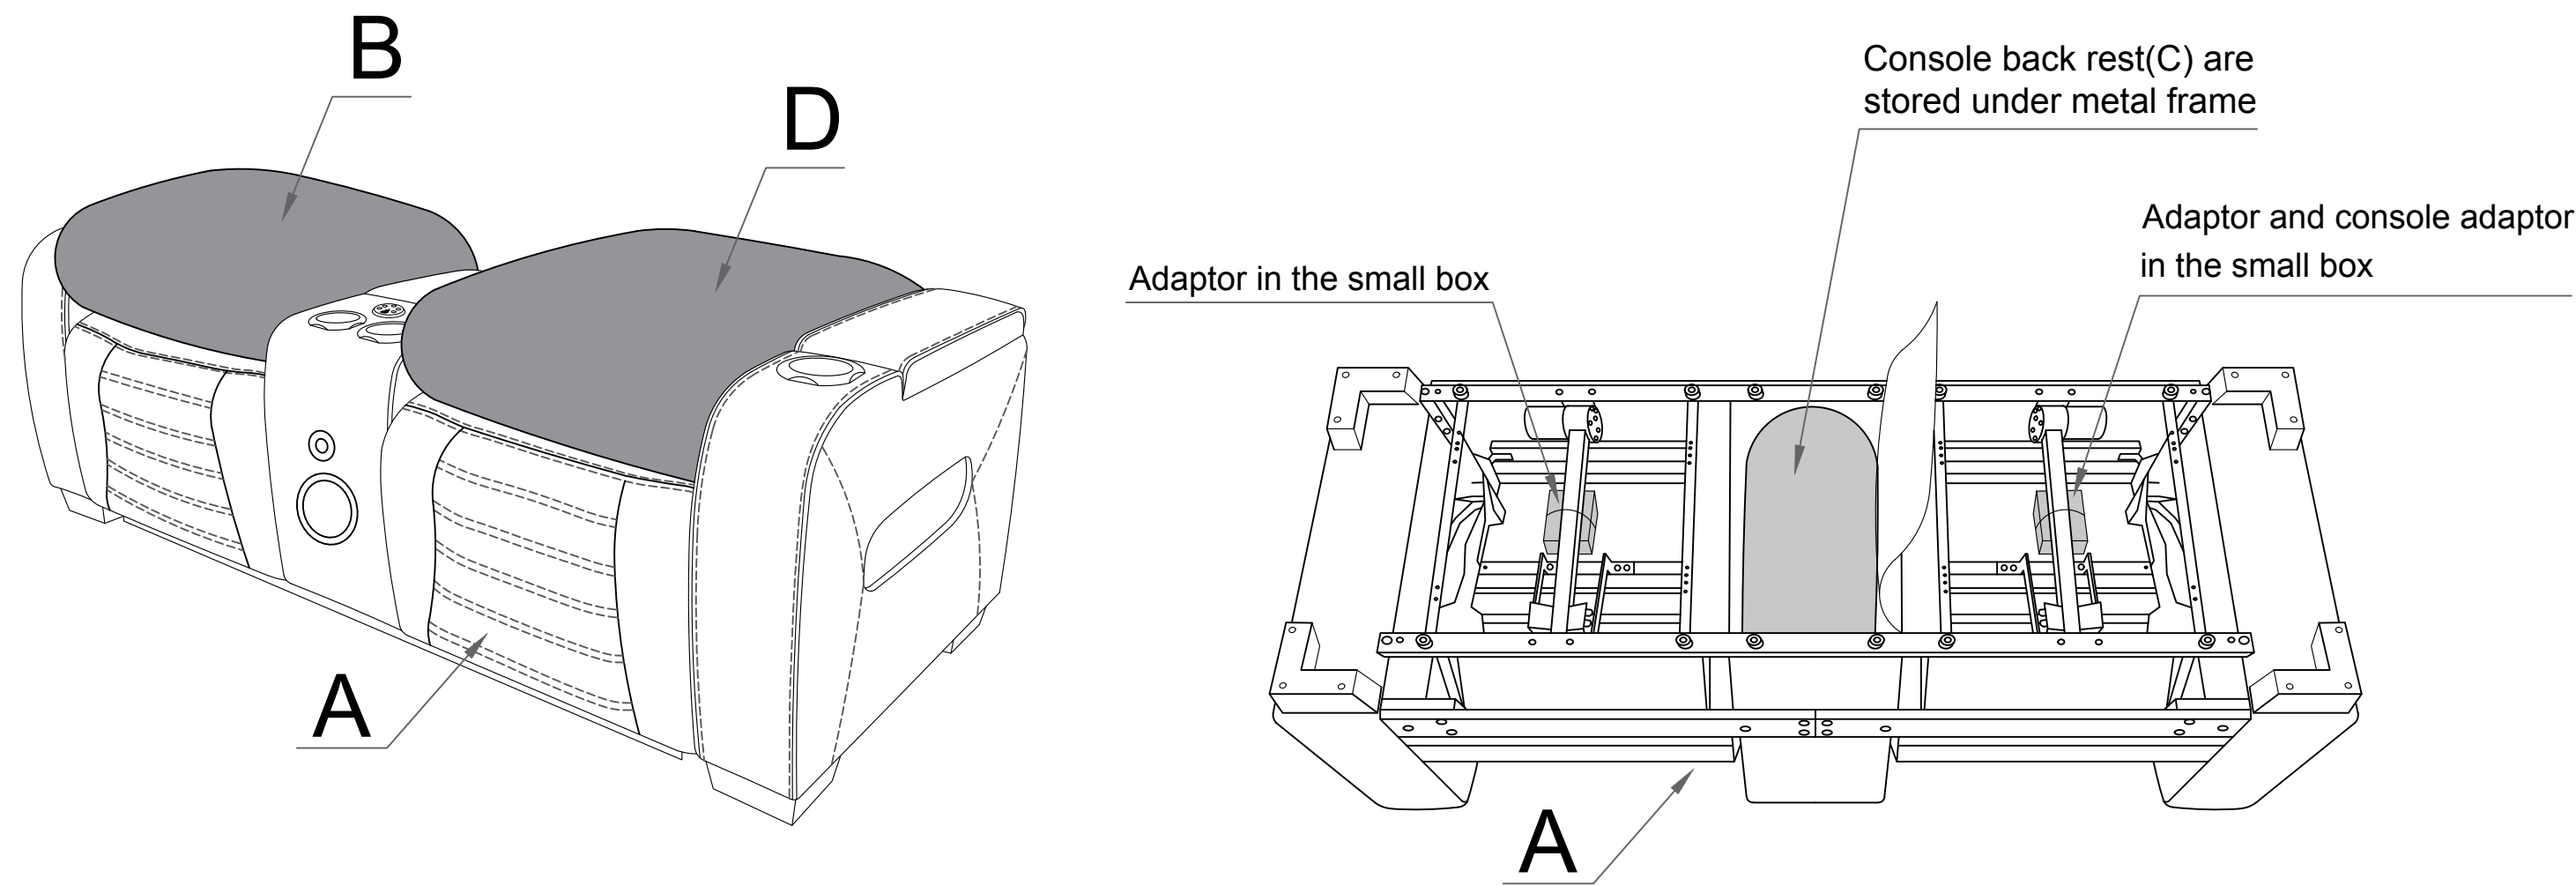


Step #2

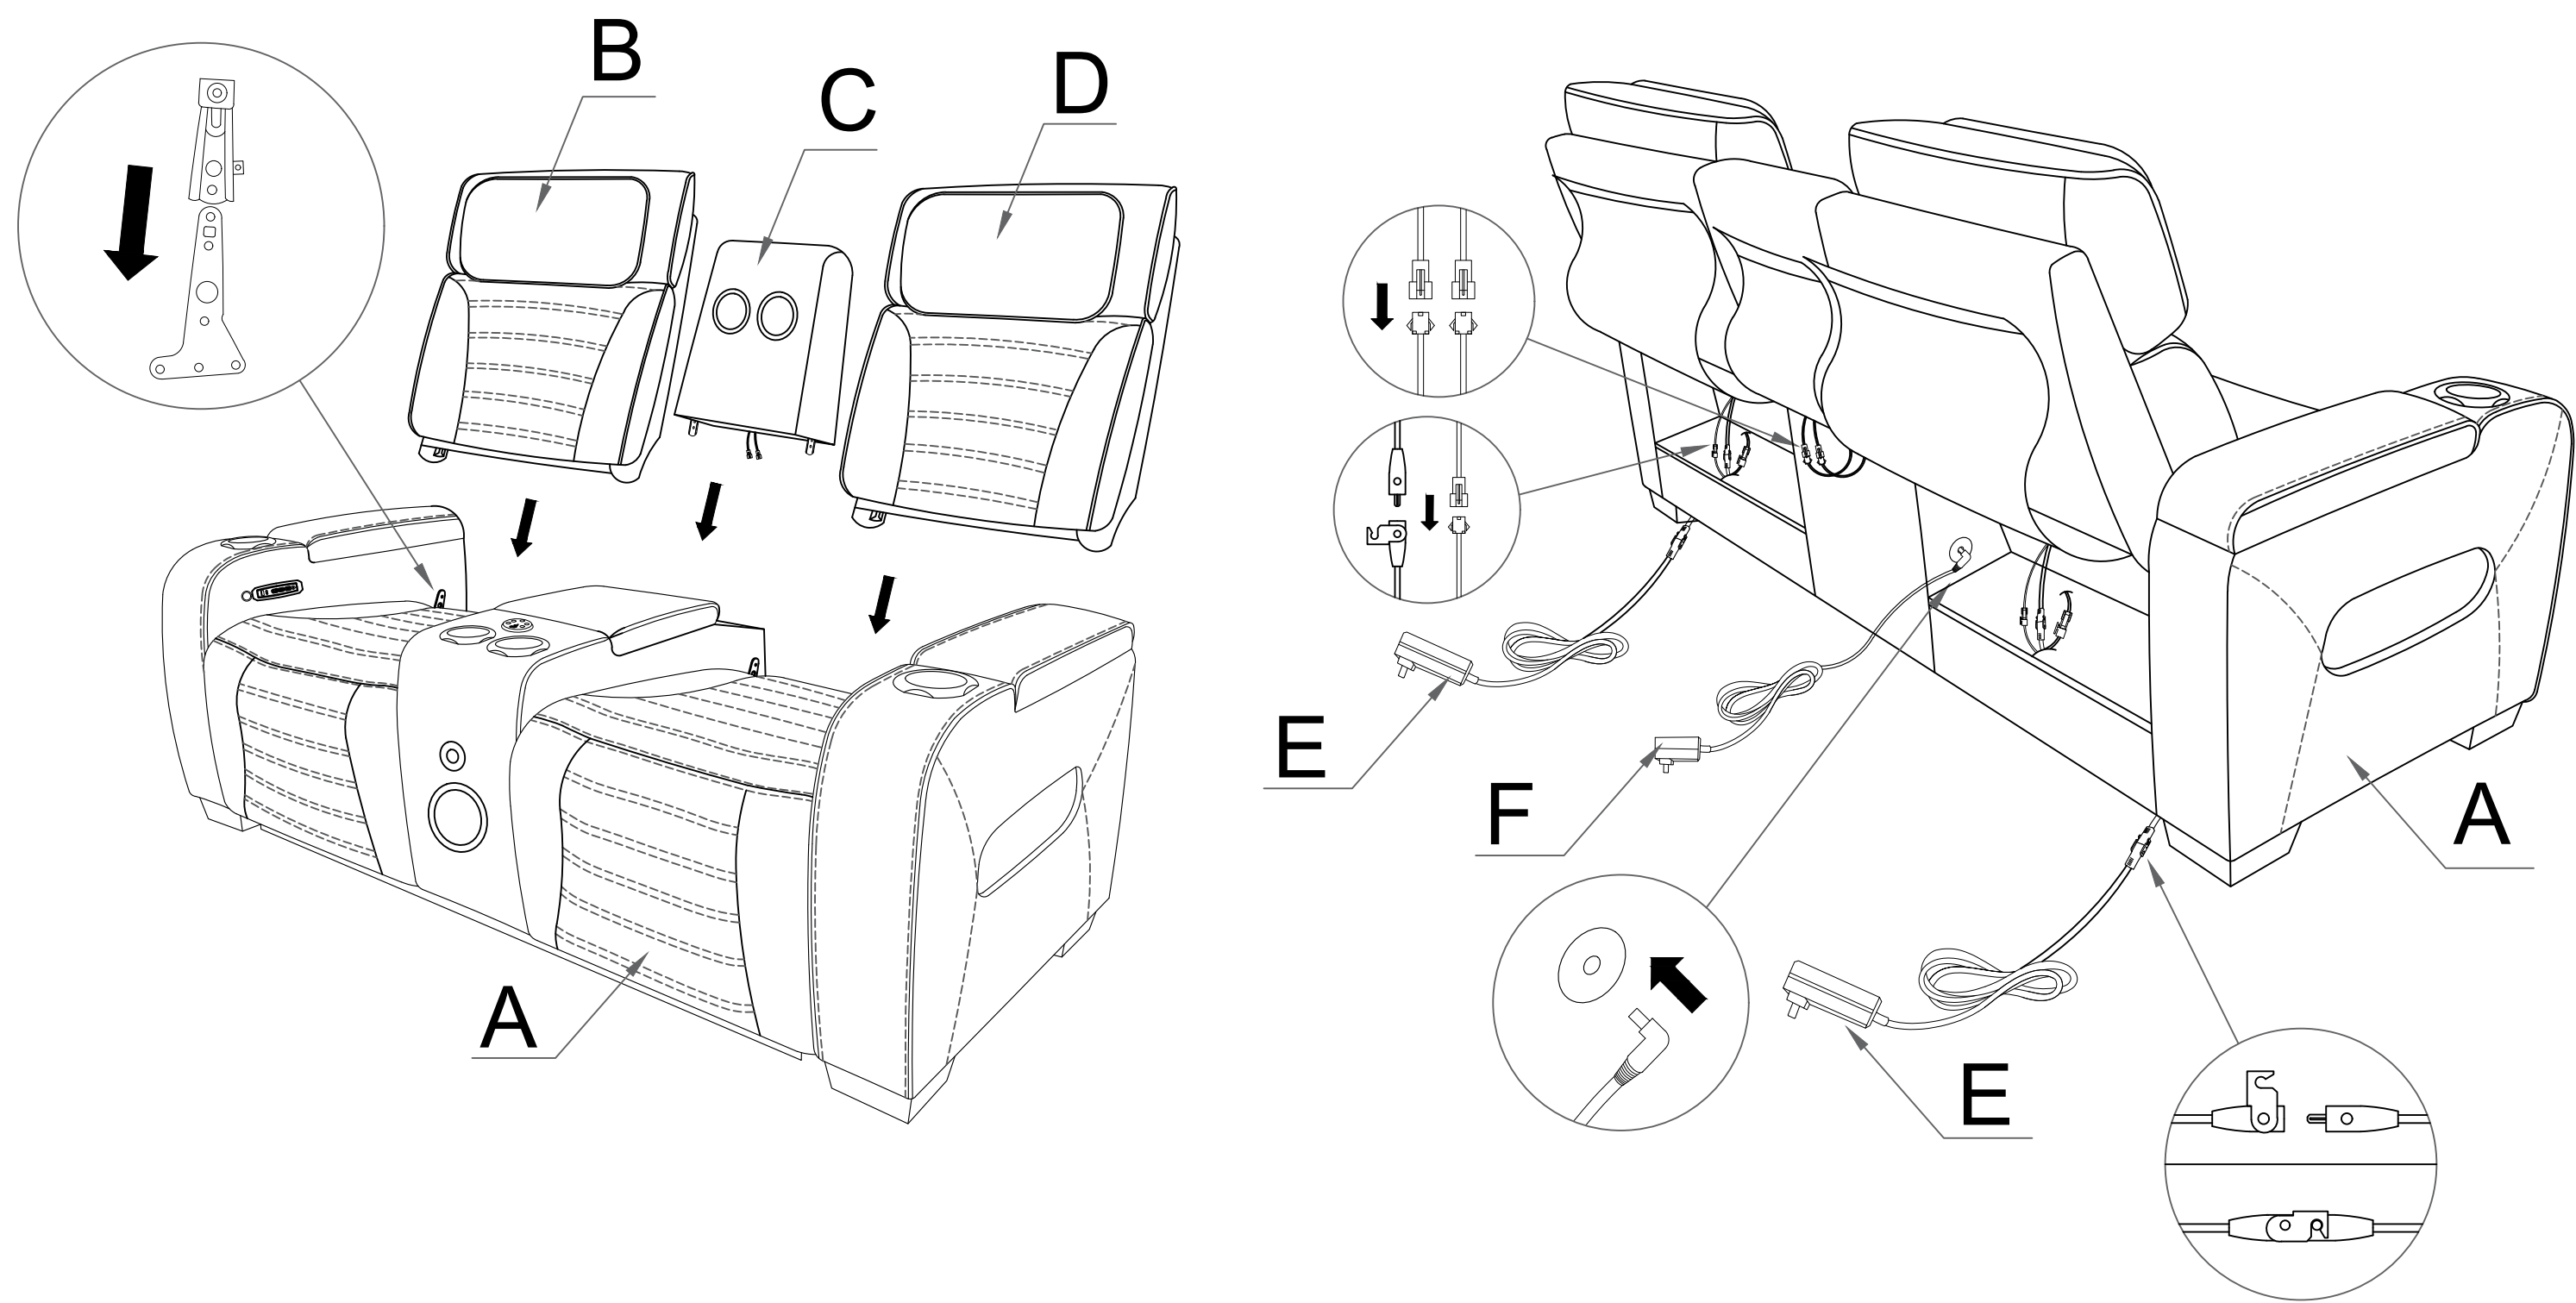

Step #3

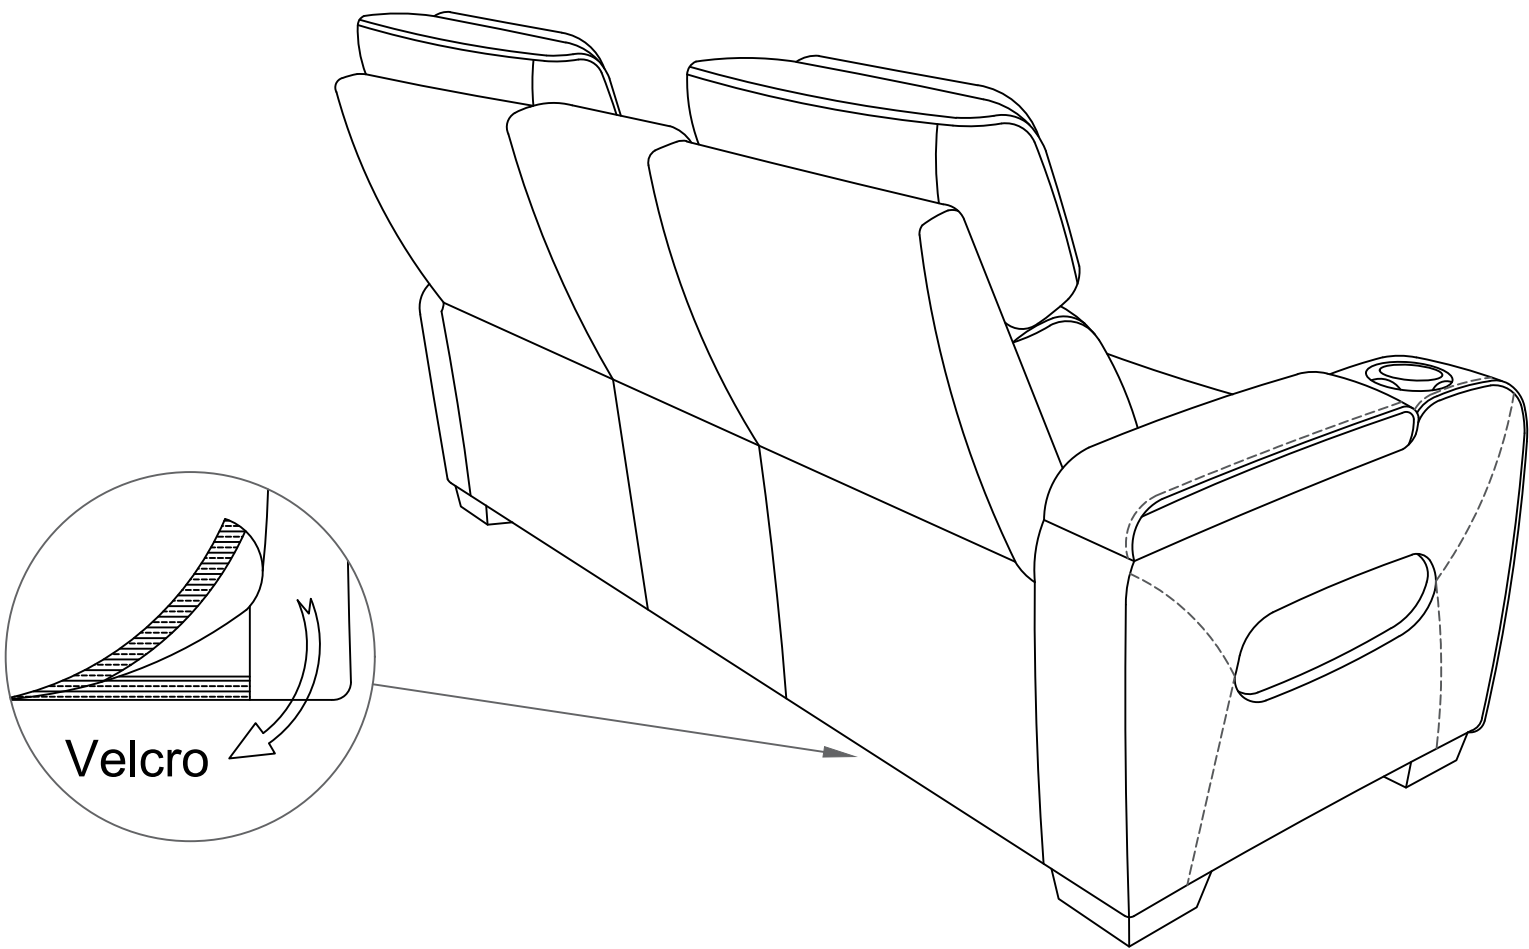

Step #4

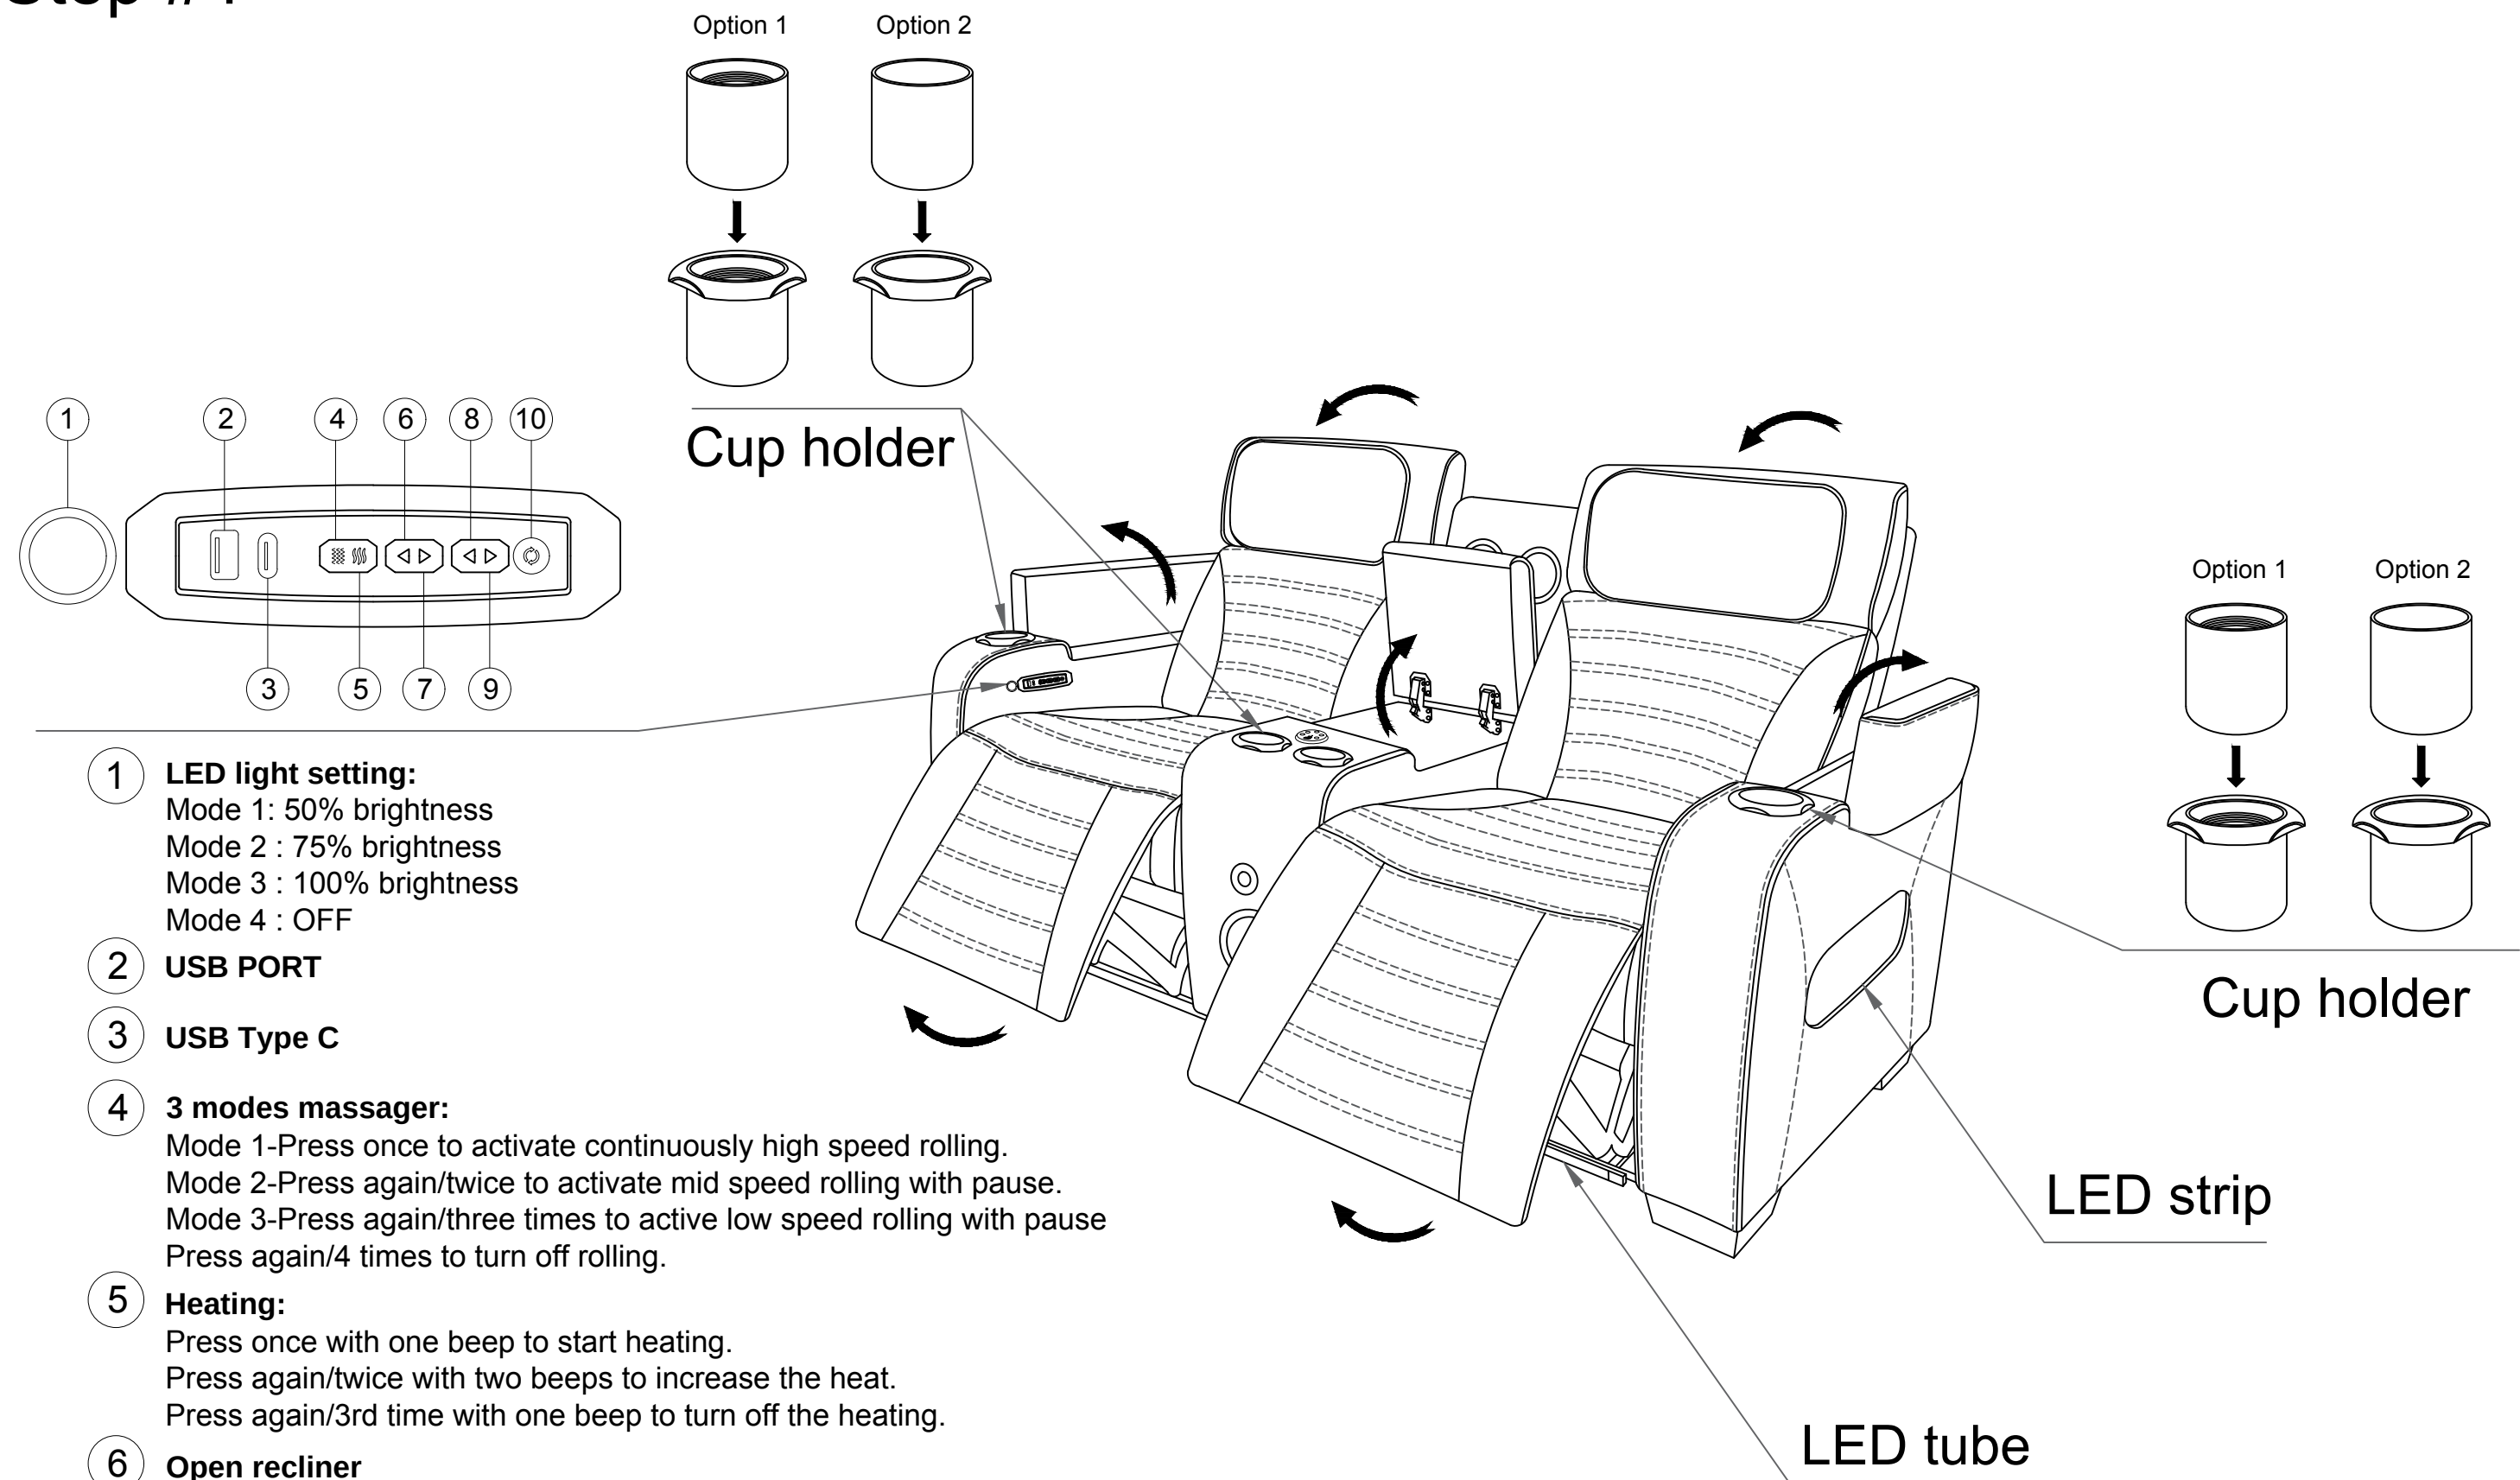


- 1 **LED light setting:**
Mode 1: 50% brightness
Mode 2 : 75% brightness
Mode 3 : 100% brightness
Mode 4 : OFF
- 2 **USB PORT**
- 3 **USB Type C**
- 4 **3 modes massager:**
Mode 1-Press once to activate continuously high speed rolling.
Mode 2-Press again/twice to activate mid speed rolling with pause.
Mode 3-Press again/three times to active low speed rolling with pause
Press again/4 times to turn off rolling.
- 5 **Heating:**
Press once with one beep to start heating.
Press again/twice with two beeps to increase the heat.
Press again/3rd time with one beep to turn off the heating.

- 6 **Open recliner**
- 7 **Close recliner**
- 8 **Open headrest**
- 9 **Close headrest**
- 10 **Home button / Indicator light button**


Home button: Reset recliner and headrest
**Massage and heating functions automatically turn off without operation after 30 minutes.

Indicator Light Status:

- Blue Light – Massage function is ON
- Red Light – Heating function is ON
- Blue + Red Lights – Both Massage and Heating are ON at the same time.
- Light OFF – Both Massage and Heating are OFF.

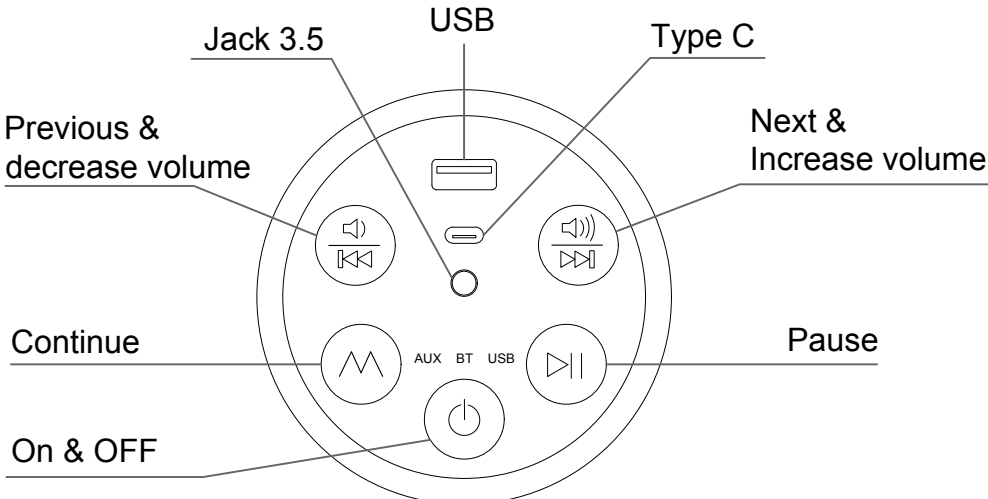

Control panel

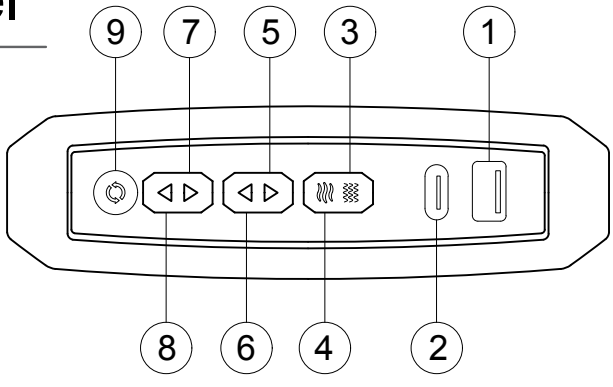


- 1 **USB PORT**
- 2 **USB Type C**
- 3 **3 modes massager:**
Mode 1-Press once to activate continuously high speed rolling.
Mode 2-Press again/twice to activate mid speed rolling with pause.
Mode 3-Press again/three times to active low speed rolling with pause
Press again/4 times to turn off rolling.
- 4 **Heating:**
Press once with one beep to start heating.
Press again/twice with two beeps to increase the heat.
Press again/3rd time with one beep to turn off the heating.
- 5 **Open recliner**
- 6 **Close recliner**
- 7 **Open headrest**
- 8 **Close headrest**
- 9 **Home button / Indicator light button**


Home button: Reset recliner and headrest
**Massage and heating functions automatically turn off without operation after 30 minutes.

Indicator Light Status:

- Blue Light – Massage function is ON
- Red Light – Heating function is ON
- Blue + Red Lights – Both Massage and Heating are ON at the same time.
- Light OFF – Both Massage and Heating are OFF.

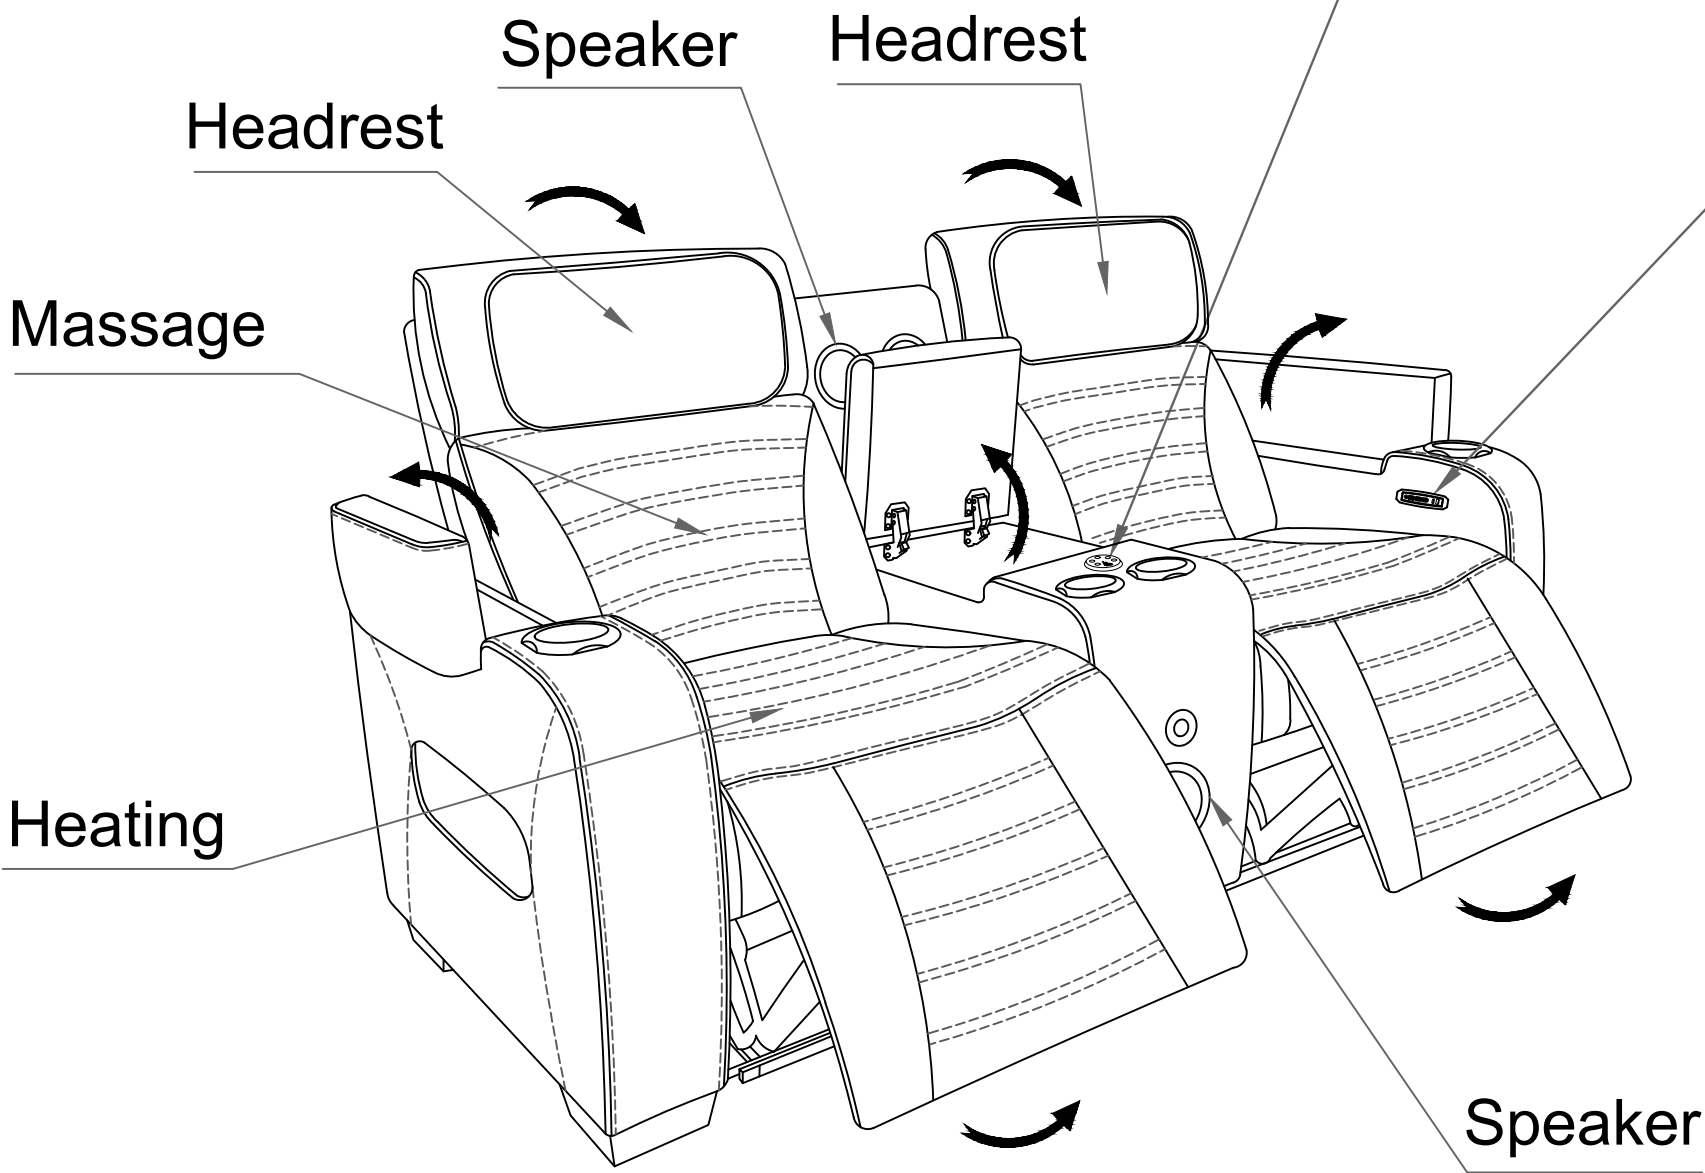

Thank you for using eMotion Bluetooth sound system.
Before using this unit please read the instruction carefully.
This audio system is for indoor use only.
Do not attempt to modify, repair it, please contact store or customer service if you have any issue.
Trying to remove panels or repairing the unit could result electric shock, property damage and injury.
Please connect the unit directly to wall outlet, do not use extension cord.
As for how to pair Bluetooth speaker, please refer to the Instruction Manual

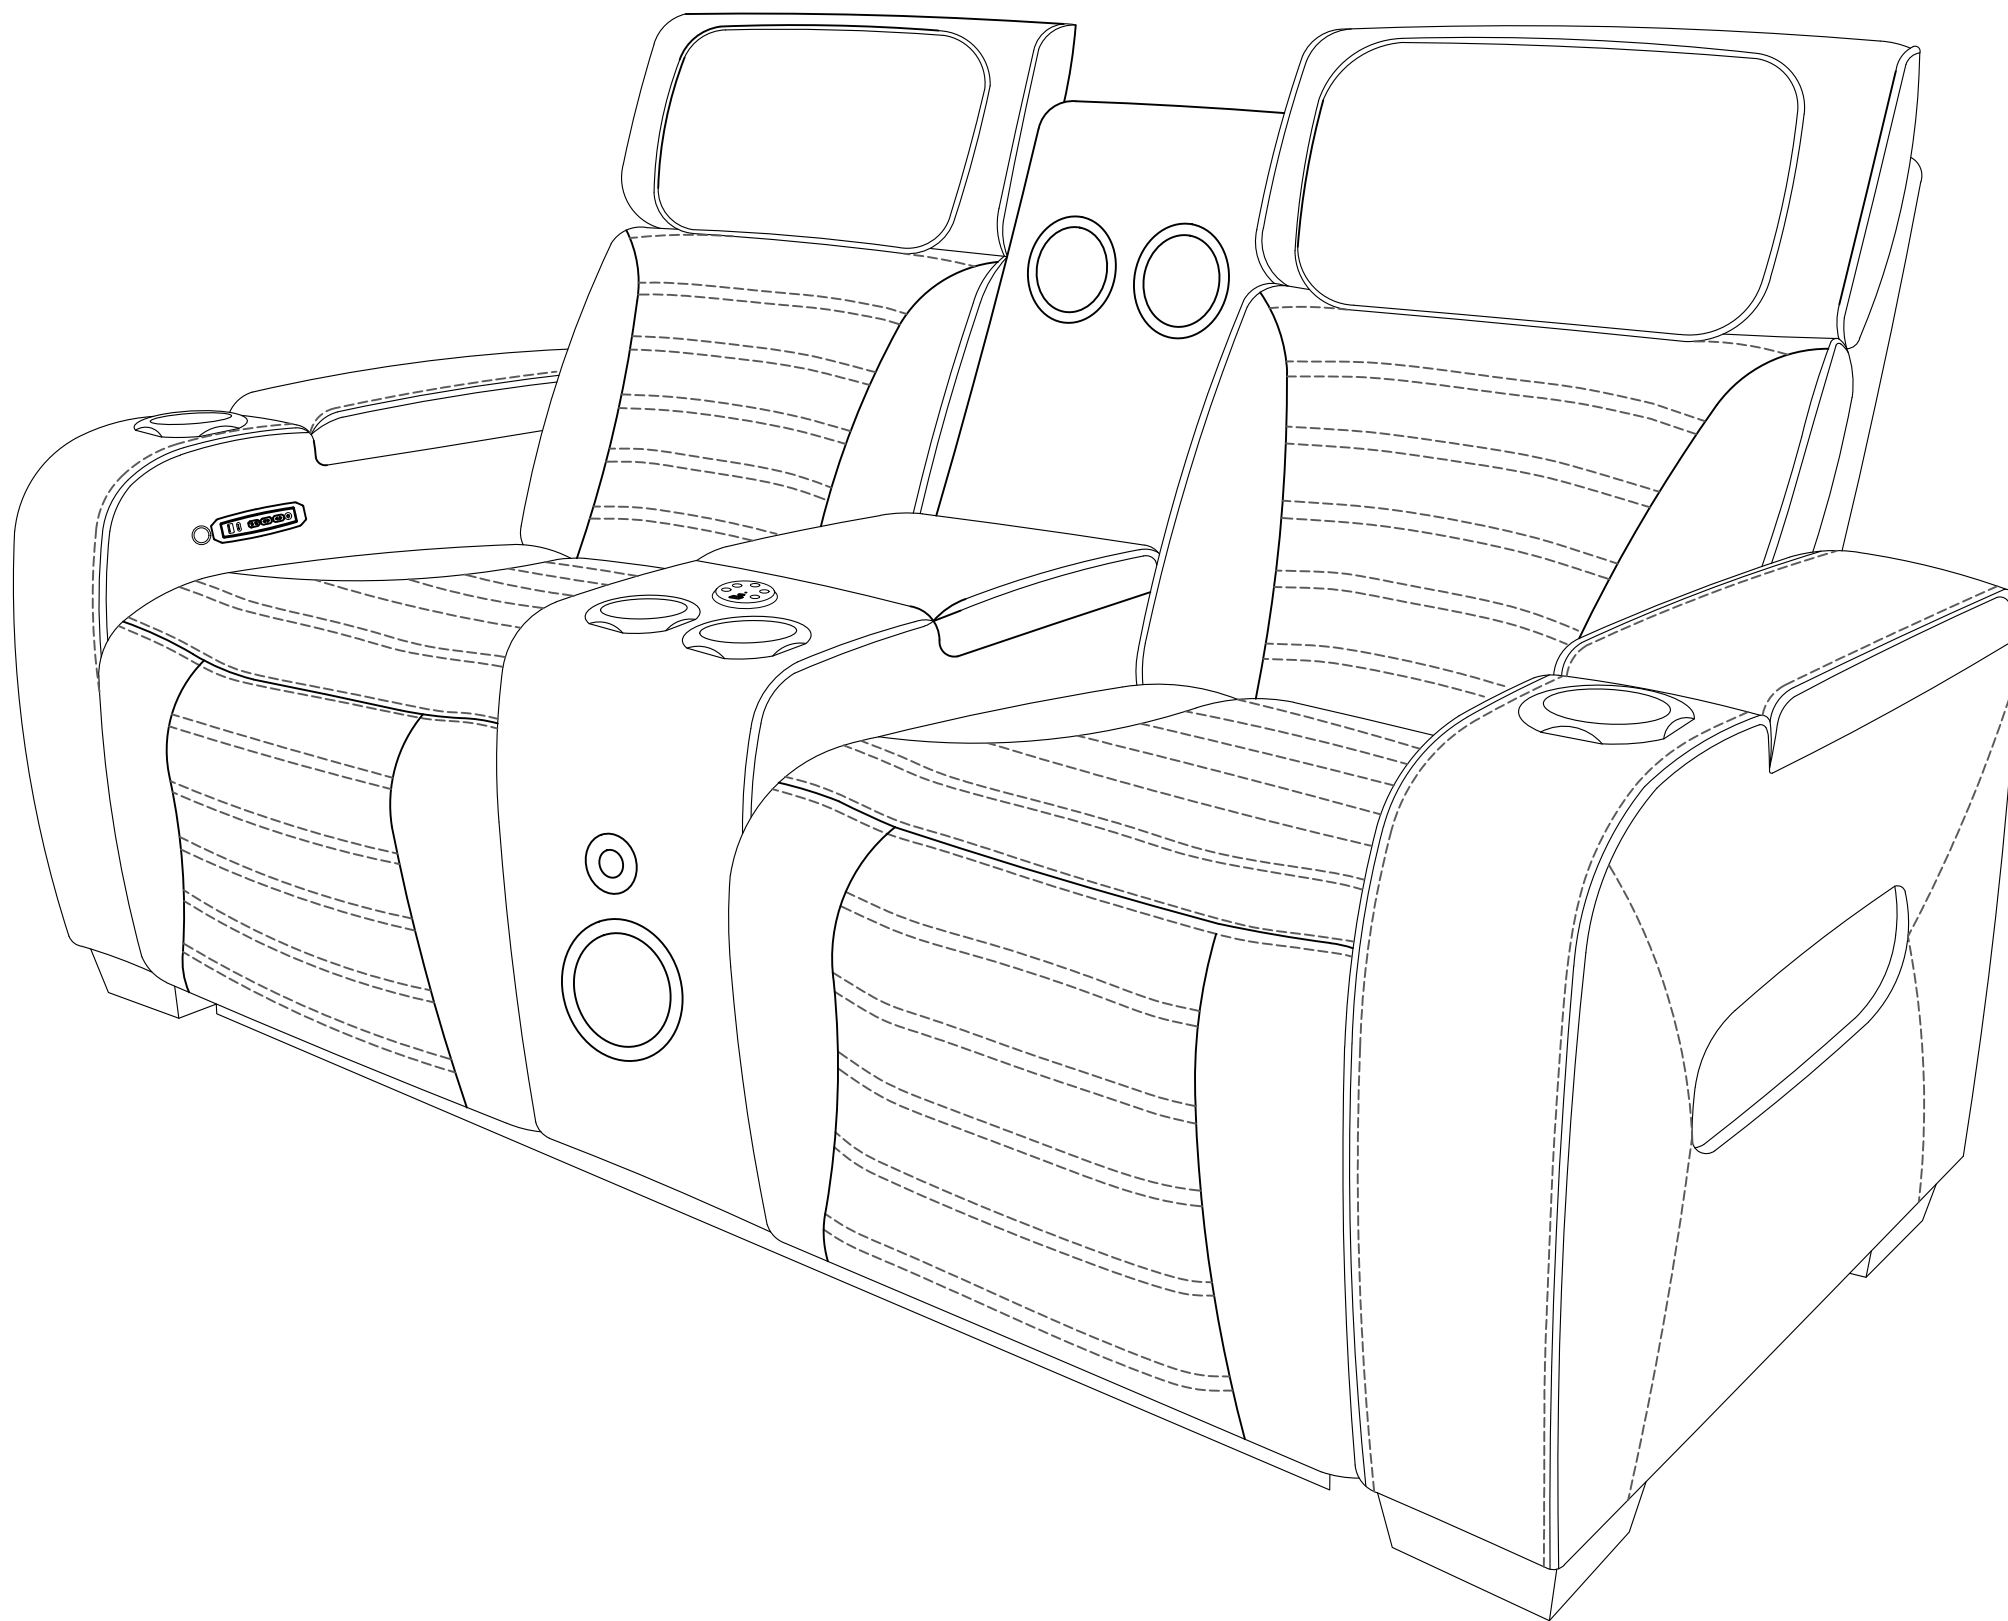

Care Instruction for Leather Match PVC Furniture:

In order to maintain the original appearance of your Leather Match PVC, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage Leather Match PVC.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connections are tight, Re-tighten if necessary.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.