



Assembly Instruction

ITEM NO.: 8517BRW/GRY/PWT-3PW
Power Double Reclining Sofa




Hardware are stored at the bottom of sofa, please take out it for assembly hardware for assembly.

Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.


Component list

No	Drawing	Qty	Description
A	A line drawing of a three-seater sofa seat, showing the backrest, seat cushions, and armrests.	1	SEAT
B	A line drawing of a rectangular backrest cushion, specifically for the left side of the sofa.	1	LSF BACK REST
C	A line drawing of a rectangular backrest cushion, specifically for the middle of the sofa.	1	MIDDLE BACK REST
D	A line drawing of a rectangular backrest cushion, specifically for the right side of the sofa.	1	RSF BACK REST
E	A line drawing of a power cord with a standard three-prong electrical plug at one end and a connector at the other.	1	PLUG
F	A line drawing of a rectangular power adaptor box with a power cord connected to one side.	1	ADAPTOR


Step #1

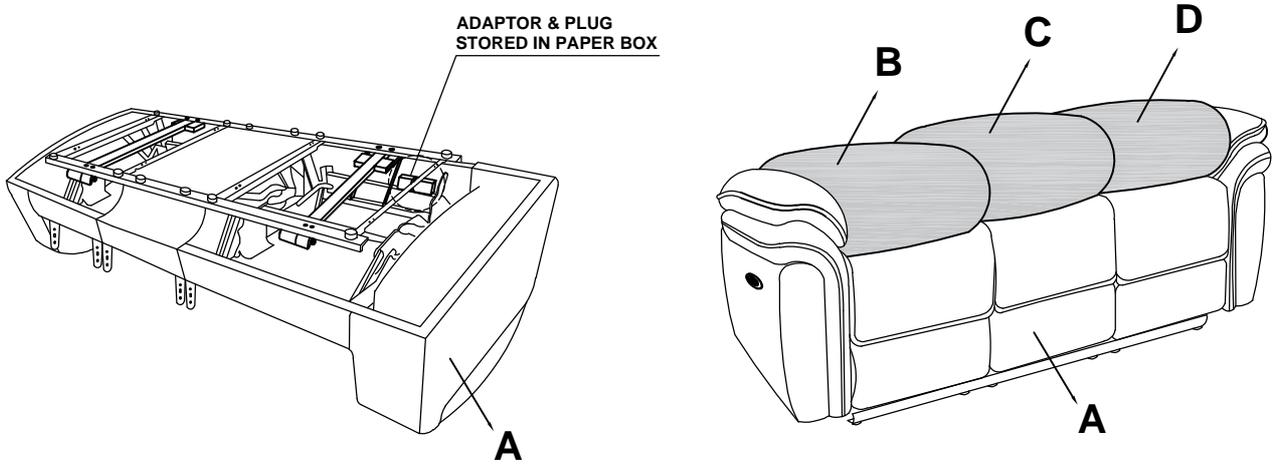

Step #2

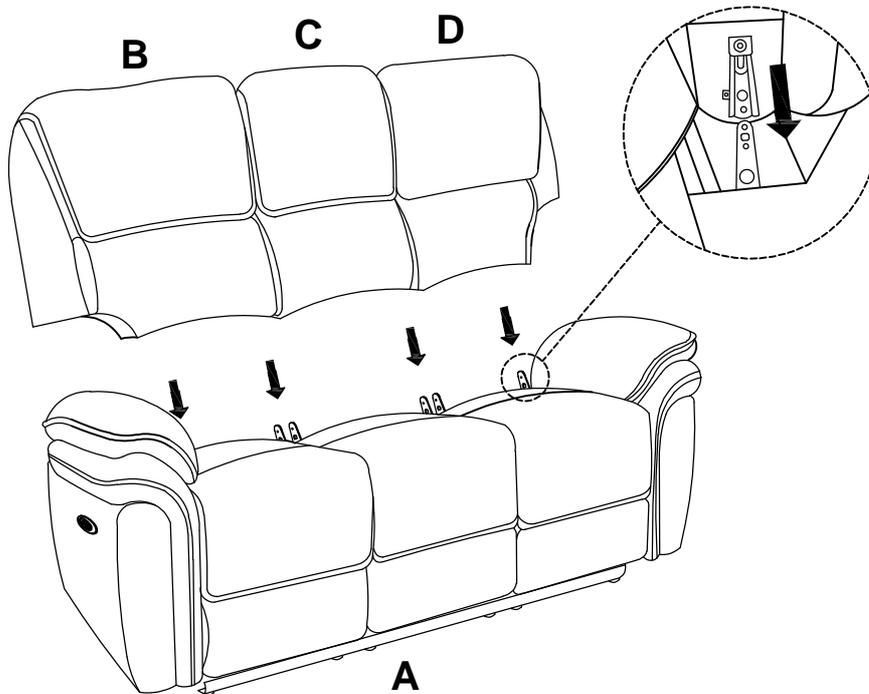

Step #3

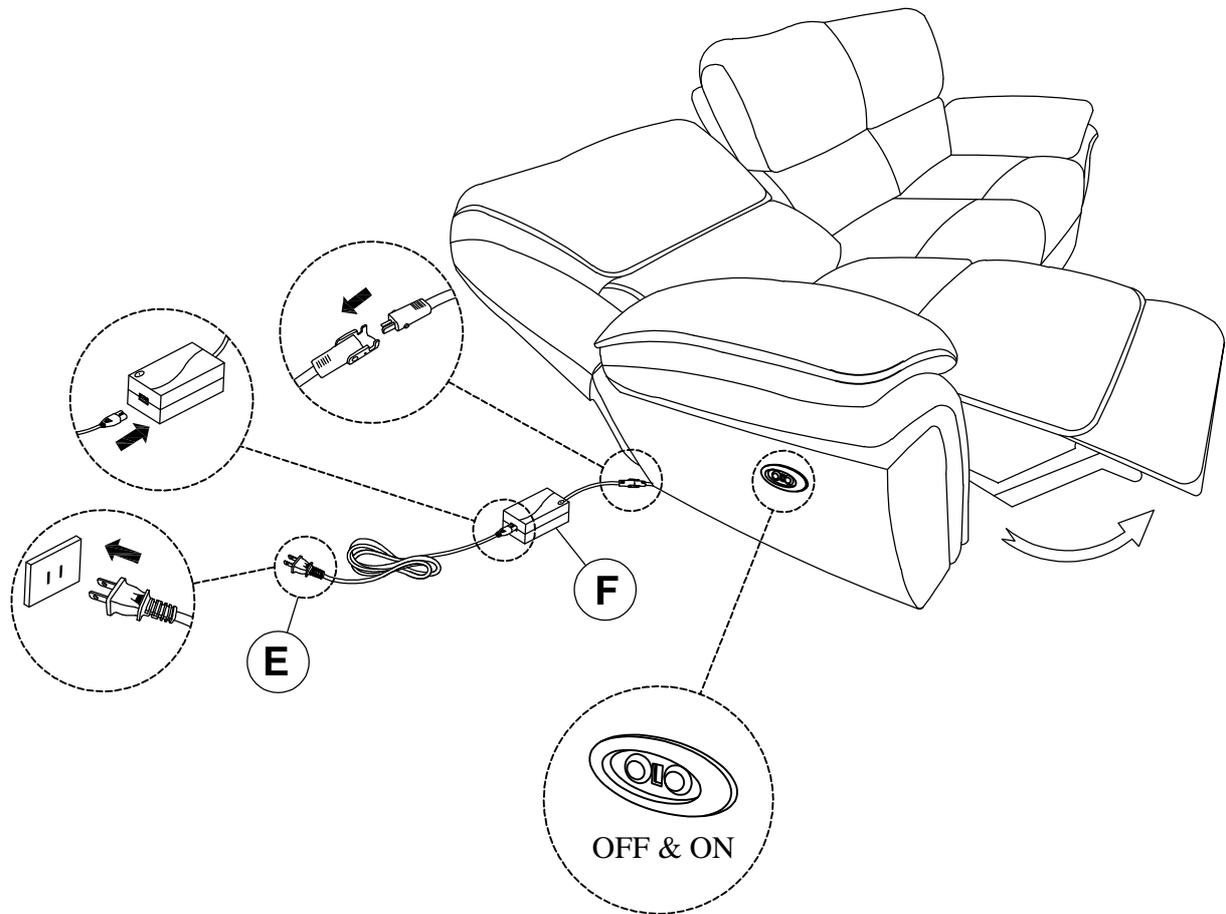

Care Instruction for Polished Microfiber Fabric Furniture:

In order to maintain the original appearance of your Polished Microfiber Fabric Furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage Polished Microfiber Fabric.
- Vacuum or wipe with a soft cloth to remove dust.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.