

 
ASSEMBLY INSTRUCTION

ITEM NO: 9025BEG-CR Corner Seat



Legs are stored in the bottom seat, please take out for assembly.

Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.


NO.	DRAWING	DESCRIPTION	QTY
A		Seat Frame	1 PC
B		Wooden Leg (Ø80*H102mm)	4 PCS
C		Washer (Ø50)	4 PCS

Location of KD parts


Take out legs from the zippered pocket.



Legs are stored in the bottom seat, please take out for assembly.

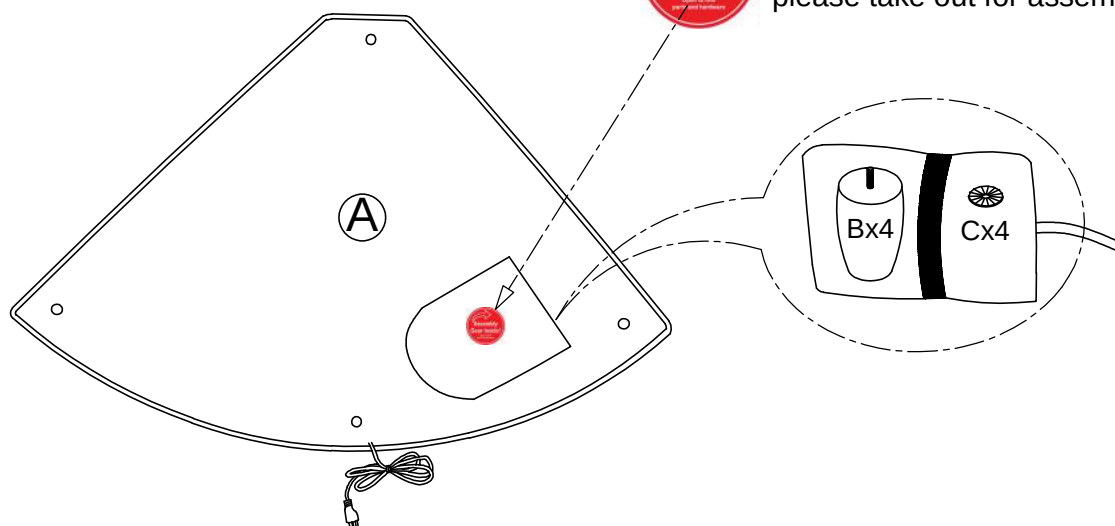


STEP 1: Secure the Wooden Leg (B) to the Seat Frame (A).

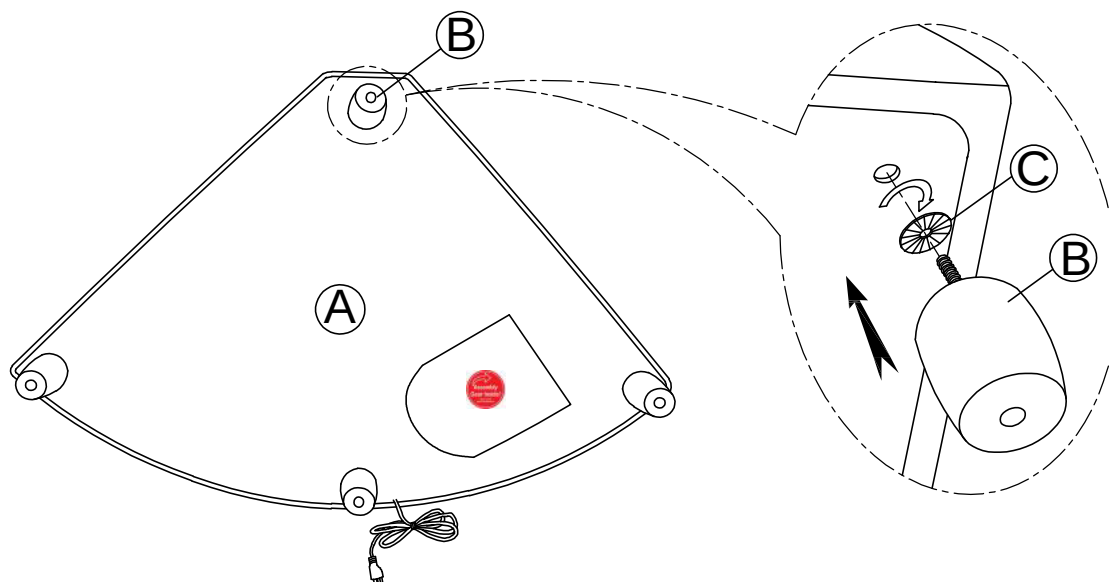


ASSEMBLY INSTRUCTION

ITEM NO: 9025BEG-CR Corner Seat

STEP 2:

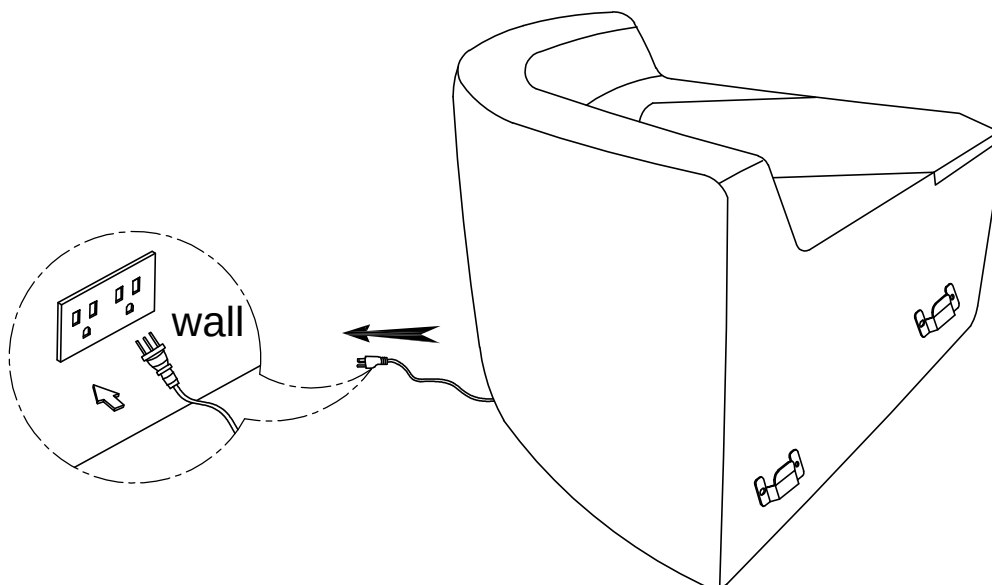

STEP 3:

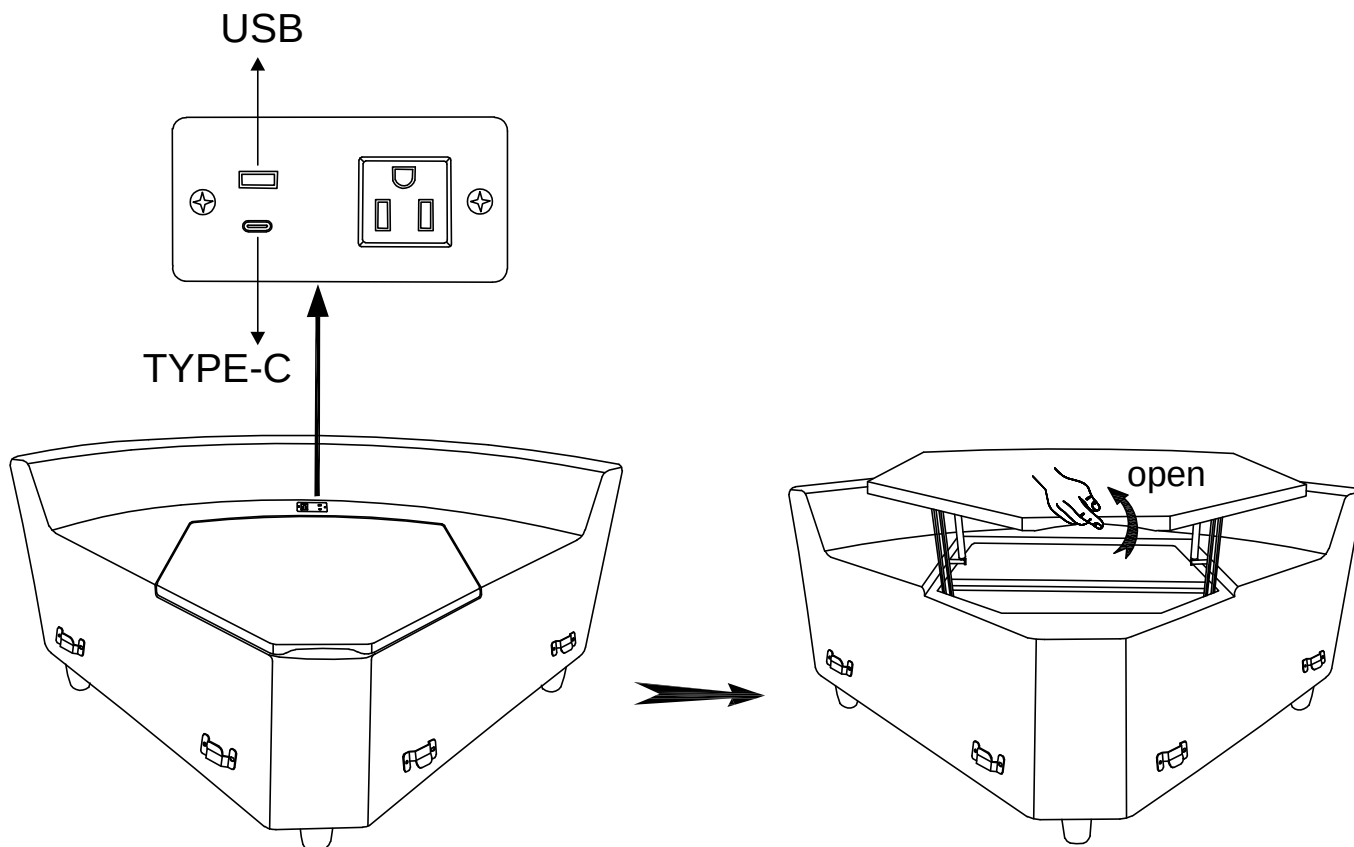


ASSEMBLY INSTRUCTION


ITEM NO: 9025BEG-CR Corner Seat

NO.	PARTS LIST	QTY	DESCRIPTION
A		1	Right Side Chaise -RC
B		1	Corner Seat -CR
C		1	Armless Chair -AC
D		1	Left Side Chair -1L

STEP 4:

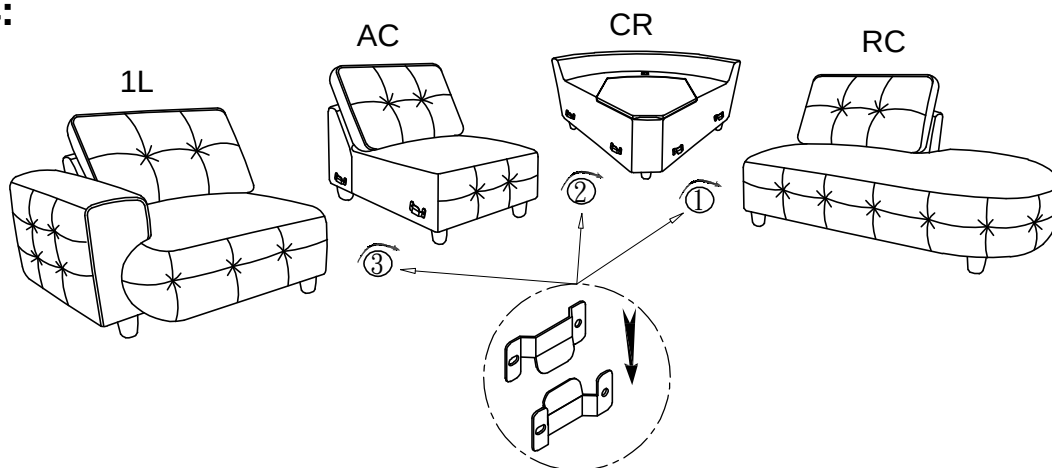

STEP 5: COMPLETED

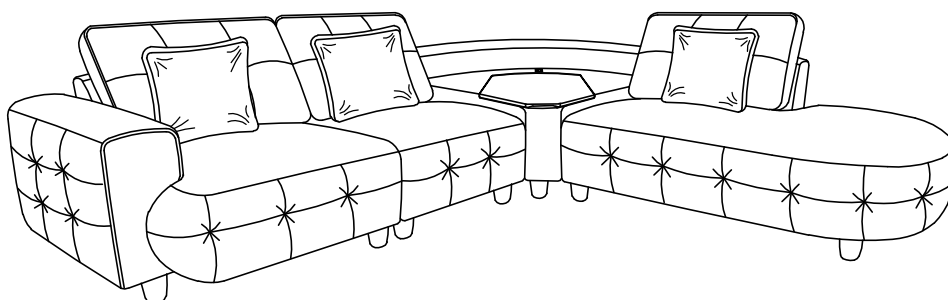

Care Instruction for Fabric Furniture:

In order to maintain the original appearance of your Fabric Furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage Fabric.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connections are tight, Re-tighten if necessary.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.