








# Assembly Instruction

ITEM#: 1468-9 CHEST


## PART LIST

1	CHEST	1 PC
2	BUN FOOT 	4 PCS

## ANTI-TIPPING HARDWARE PACK IN-9


A		BRACKET	2 PCS
B		TIE WRAP	1 PC
C		SCREW #8x2"L	1 PC
D		SCREW #8x5/8"L	1 PC

### STEP 1


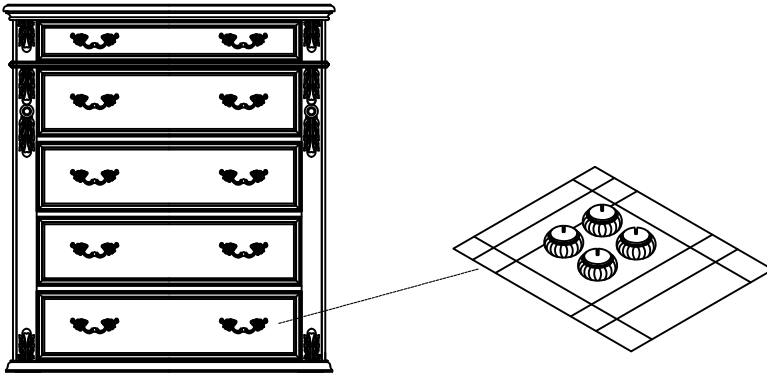


-REMOVE ANTI-TIPPING PACK FROM BACK PANEL. ASSEMBLE IT TO AVOID TIPPING.

### STEP 2

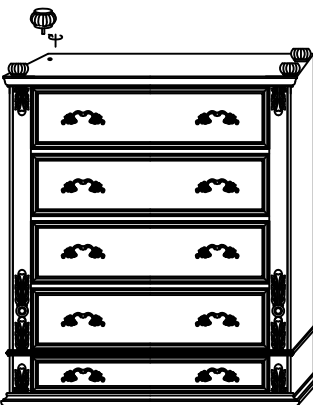

### STEP 3

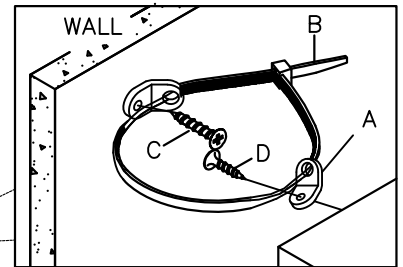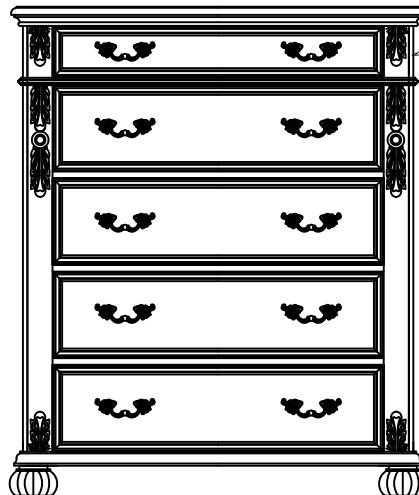

Assembly completed



- For items use on wooden floor hard surfaces or carpets. It is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.
- Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tight if necessary.