

## **Assembly Instruction**

ITEM NO.: 9555BEG/9555BRW-AC (1/3) Armless Chair




Legs & hardware are stored in the box, please take out the legs and hardware for assembly.

Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

## Chair Component list

No	Drawing	Qty	Description
Α		1	SEAT
В		1	SEAT CUSHION
С		1	HEADREST
D		1	BACK CUSHION
E		1	RECTANGULAR PILLOW 680*400*120mm
F		4	PLASTIC LEG 10*150*70mm
G	MIIIIII MIIIII MIIII MIIII MIIII MIIII MIIII MIIII MIIII MIIIII MIIII MIIIIII	16	SCREW M4*70mm
Н		2	CONNECTION LOCK 78*50*40mm

## THE PARTS ARE LOCATED INSIDE THE BOX AS BELOW:

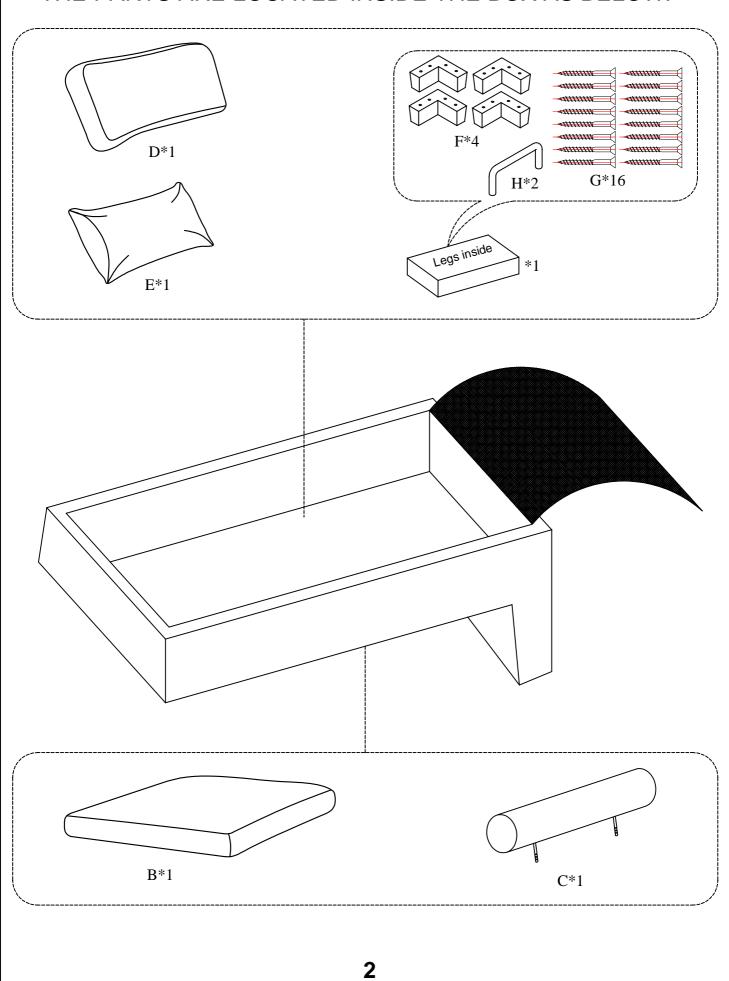


# Step #1


(not included).

Note: Screw driver


Step #2

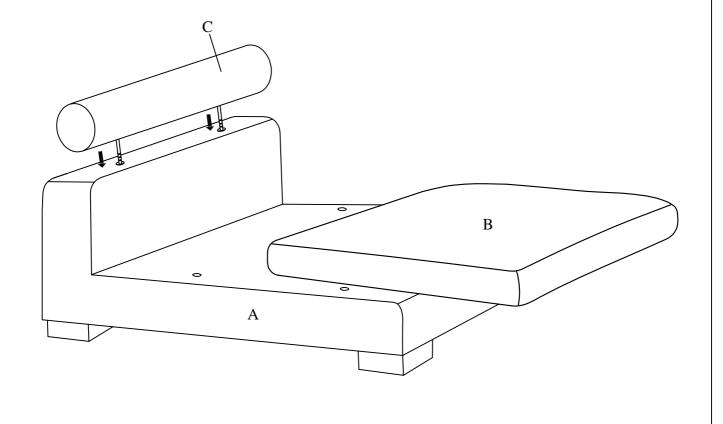

Step #3

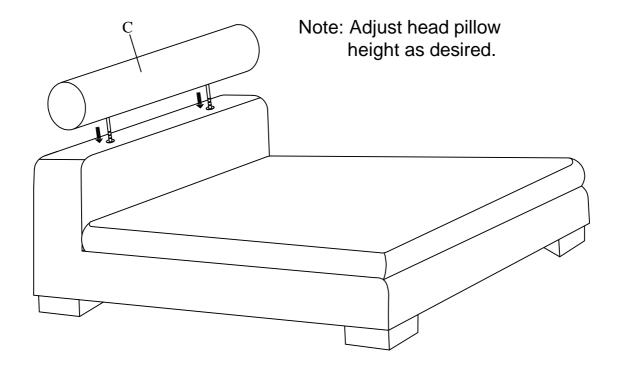


Step #4

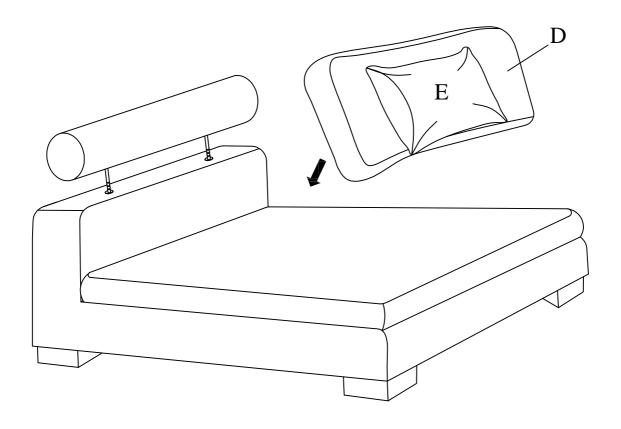

## Step #5 Step #6 9555BEG/BRW-CR 9555BEG/BRW-VC 9555BEG/BRW-AC 9555BEG/BRW-4 5

Step #7
Assembly completed.

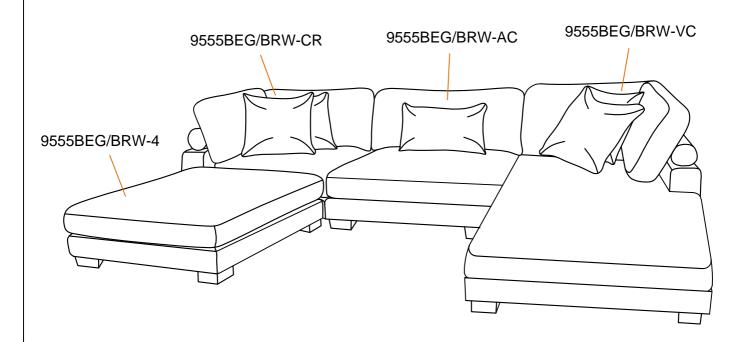

### Care Instruction for Textured Microfiber Furniture:

In order to maintain the original appearance of your textured microfiber please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and/or exposure to heating and air conditioning outlets will fade/damage textured microfiber. Do not place your upholstered furniture too close to windows, radiators, or vents, and be sure to use windows, radiators, or vents.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.